



Disponibilidade de Hardware SPT-4750

1)ENTRAR NA BIOS PREMINDO A TECLA DEL.

2)MENU ADVANCED:

2.1)SUPER IO CONFIGURATION:

2.1.1:SERIAL PORT 3:

- SERIAL PORT 3 POWER : ALTERAR PARA 12V

2.2.2:UART IRQ MODE: ALTERAR PARA ISA IRQ

ENDEREÇOS PORTAS

COM1: 4

COM2: 3

COM3: 1

COM4: 5

PORTA DISPLAY : 6