



*Left side:* Remove the bolt [1] and brake hose guide [2].  
Loosen the fork top bridge pinch bolts [3].  
If you will disassemble the fork, loosen the fork cap [4],  
but do not remove it.

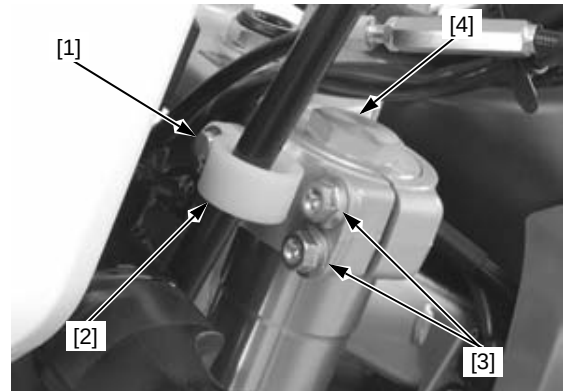

Loosen the fork bottom pinch bolts [1] while supporting the fork leg.  
Pull the fork leg down and remove it out of the fork bridges.

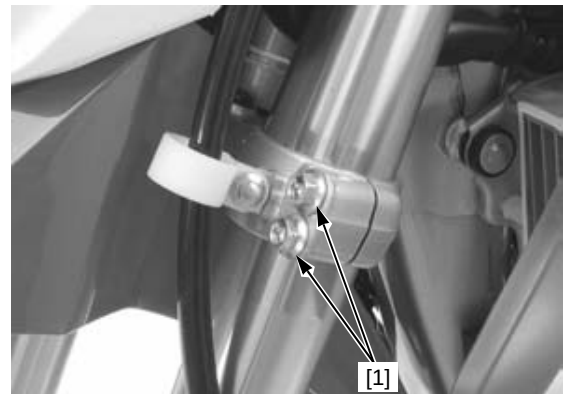

**INSTALLATION**

Install the outer tube into the bottom and top bridges.  
Align the top of the outer tube with the upper surface of the top bridge.

Tighten the bottom bridge pinch bolts [1] to the specified torque.


**TORQUE: 32 N·m (3.3 kgf·m, 24 lbf·ft)**

Tighten the fork cap [2] to the specified torque if it was removed.

**TORQUE: 35 N·m (3.6 kgf·m, 26 lbf·ft)**

Tighten the top bridge pinch bolts [3] to the specified torque.

**TORQUE: 32 N·m (3.3 kgf·m, 24 lbf·ft)**

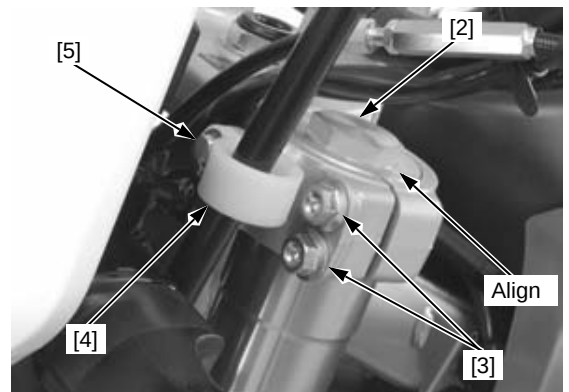

*Left side:* Install the brake hose guide [4] and tighten the bolt [5] to the specified torque.

**TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)**

