


FRONT WHEEL/SUSPENSION/STEERING

Install the fork protectors [1].
Install and tighten the new socket bolts [2] to the specified torque.

TORQUE: 7.0 N·m (0.7 kgf·m, 5.2 lbf·ft)

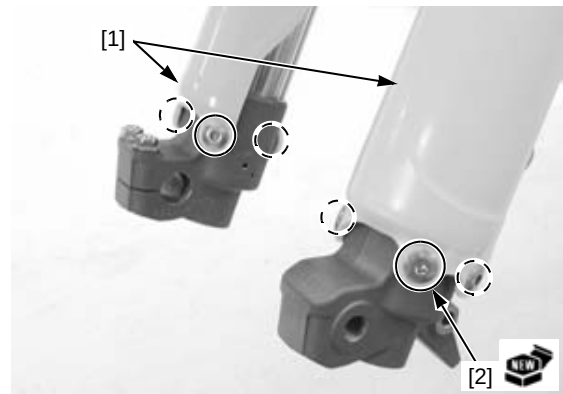


Install the brake hose clamp [1] to the left fork leg and tighten the bolts [2] to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the brake caliper [3] with new mounting bolts [4] and tighten them to the specified torque.


TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the front wheel (page 16-4).

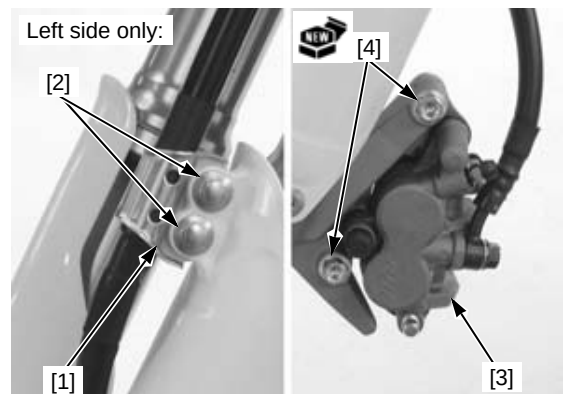

Inspect the wear rings [1] for wear or damage.

Replace the wear ring, if it is 1.5 mm (0.06 in) or flat with the outer tube.

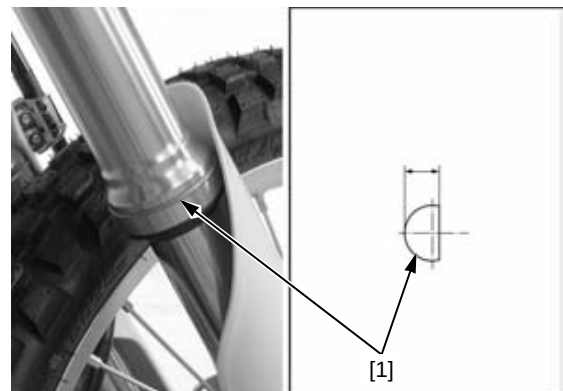

DISASSEMBLY

NOTE:

- Clean the fork assembly, the sliding surface of the fork pipe and bottom of the slider around the center bolt before disassembling the fork.

Left side: Hold the fork pipe in a vise with soft jaws or shop towels.

Loosen the fork center bolt [1], but do not remove it yet.

