

VESTEL WHITE GOODS	STATIC COMBI 252-266-278	CUSTOMER SUPPORT
	Reversing the door	

1.Hold the top hinge cover and remove it toward that direction (Pic-1)



Picture-1

2.Unscrew the screws fixing the top hinge and remove it. (Pic-2)



Picture-2

3. Displace the top door (Pic-3)



Picture-3

4. Unscrew the two screws fixing the middle hinge and remove it.(Pic-4)



Picture-4

VESTEL WHITE GOODS	STATIC COMBI 252-266-278	CUSTOMER SUPPORT
	Reversing the door	

5. Displace the bottom door. (Pic-5)



Picture-5

6. Unscrew the adjustable foot (Pic-6)



Picture-6

7. Unscrew the bottom hinge screws. (Pic-7)



Picture-7

VESTEL WHITE GOODS	STATIC COMBI 252-266-278	CUSTOMER SUPPORT
	Reversing the door	

8. Unscrew the bottom hinge pin and screw it to other hole. (Pic-8)

9. Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there. (Pic-9)



Picture-8



Picture-9


10. Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side. (Pic-10)



Picture-10

VESTEL WHITE GOODS	STATIC COMBI 252-266-278	CUSTOMER SUPPORT
	Reversing the door	

11. Replace the top bushing and the top bushing cap at the bottom door. (Pic-11)

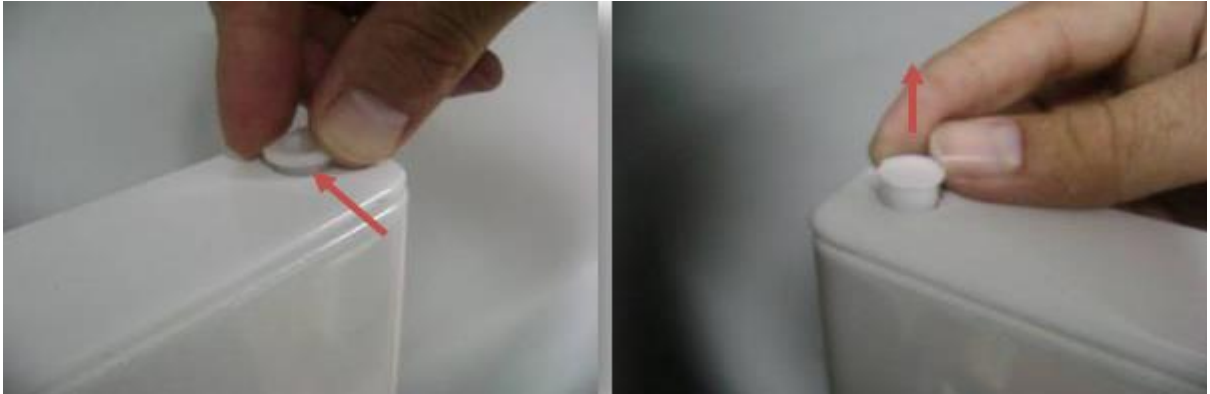

Picture-11

12. Remove the support plastic and then metal stopper placed under the upper door. (Picture-12.2) Then re screw these parts to the other side symmetrically. (remember the screw for the metal part must be screwed to the hole which is closer to the bushing). Do not use cordless screwdriver for these screws.



Picture-12.1



Picture-12.2

13. Remove the hinge cover on the top panel and replace to other side.(Pic-13)



Picture-13

VESTEL WHITE GOODS	STATIC COMBI 252-266-278	CUSTOMER SUPPORT
	Reversing the door	

14. Place the bottom door (Pic-14.1) and rotate the middle hinge by 180°. After that, Screw to the right side on the middle sheet. (Pic-14.2)



Picture-14.1



Picture-14.2

15. Place the top door to the middle hinge and screw the top hinge to the top panel. (Pic-15)

16. Place the top hinge cover. (Pic-16)





Picture-15




Picture-16

Thermostat Setting

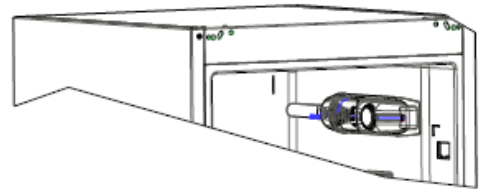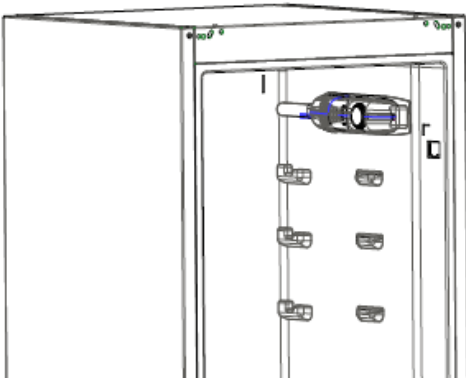


Thermostat Control

- This knob is used to control the temperature of the freezer and refrigerator parts automatically. It can be set to any value between “0” and “5” positions.
- “0” position indicates that the thermostat is “off”. The refrigerator is “off” on this setting.
- By turning the knob between “1” and “5”, you can increase or decrease the cooling degree.
- The refrigerator is designed to get optimum performance when the thermostat knob is set between position “2” to “4”.

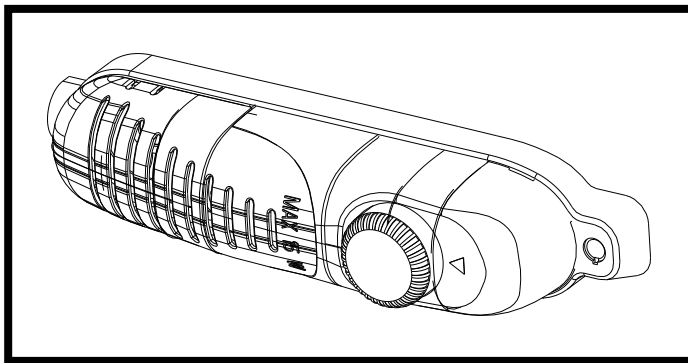

Replacement of Refrigerator Lamp


- 1- Unplug your fridge.
- 2- Remove the cover of the box from the claws using a screwdriver.
- 3- Replace with a bulb of maximum 15 Watts.
- 4- Install the cover.
- 5- Wait for 5 minutes before re-plugging and bring the thermostat to its original position.

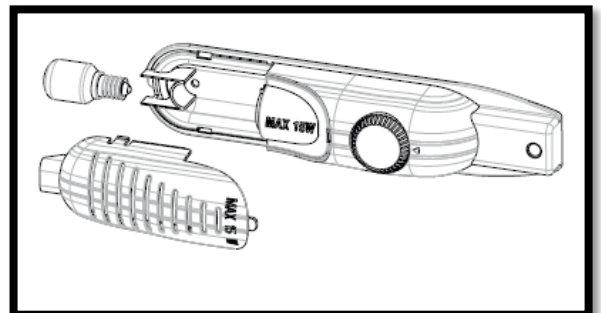

Replacement of Thermostat

CAUTION: The plug must be pulled out before the mainboard group is removed.

- 1) Remove screws which are attached two sides of the thermostat

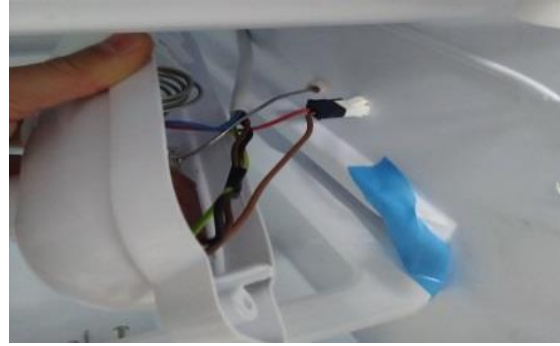

- 3) Take off all cable connection and pull thermostat bulb out



- 4) Take off the lamp and rotate the lamp holder to the position at below picture




5) Firstly take off the button and screw, change the thermostat



6) Place the thermostat, screws is tightened, insert the button

7) Place and turn the lamp holder to the position to lock

8) Connect cables as shown below

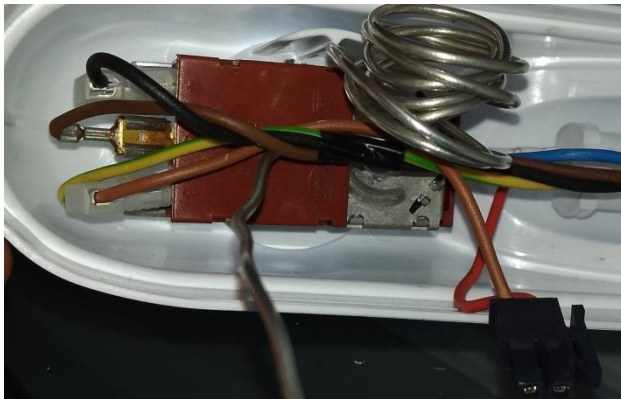

9) Send the thermostat bulb pipe throughout the hole until it end

10) Plug the black socket to the fridge

11) Close the lamp cover ve screws are tightened which are attached two sides of the thermostat

