

<b>VESTEL</b> WHITE GOODS	<b>FREEZER - 1005</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

## A- Changing The Door Swing Direction to Right Hand

1- Lie down the appliance to the left side. (FIG-1)

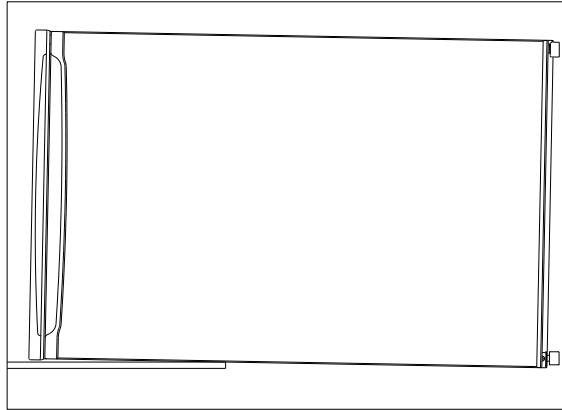


Figure - 1

2- Dismantle both leveling foot. (FIG-2.1)

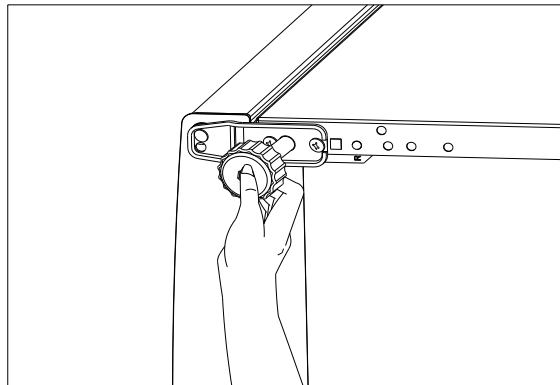


Figure - 2.1

Unscrew the bottom hinge fixing screws and remove it. (FIG-2.2)

Unscrew the bottom hinge pin and screw in the next hole. (FIG-2.3)

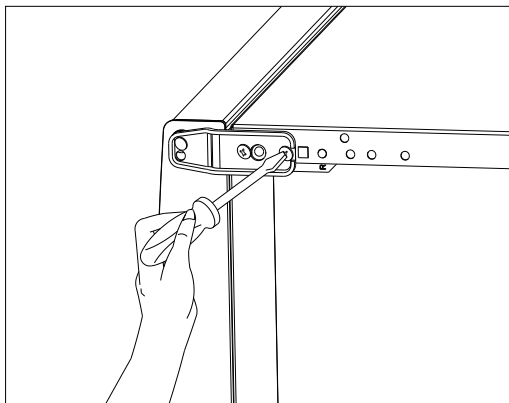


Figure - 2.2

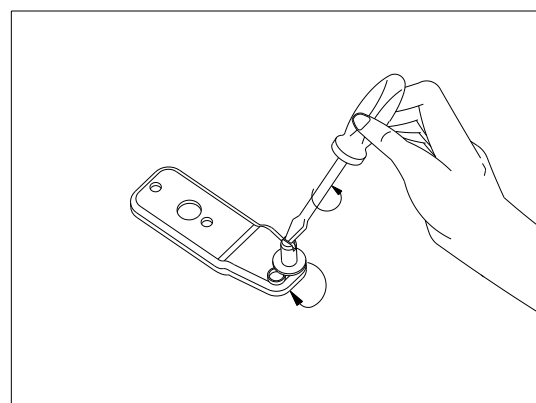


Figure - 2.3

**MARCH 2016**

<b>VESTEL</b> <b>WHITE GOODS</b>	<b>FREEZER - 1005</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSAMBLE</b>	

3- Remove the door. (FIG-3)

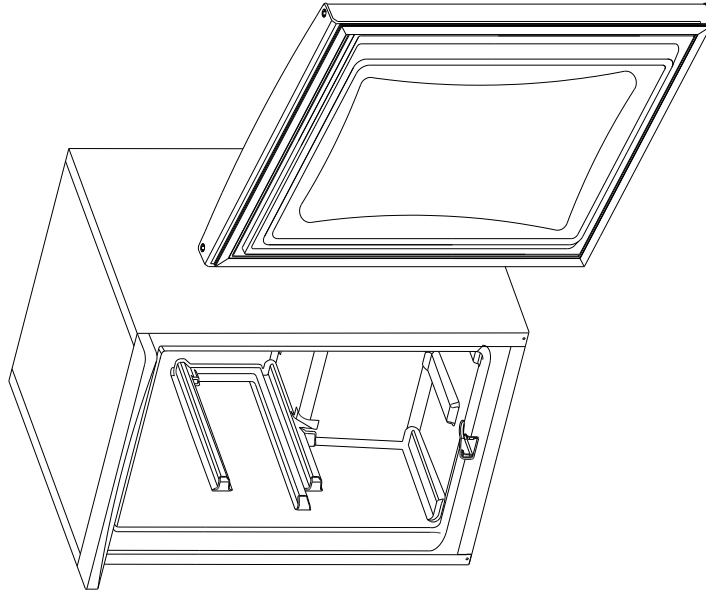


Figure - 3

4 - Unscrew the right pin of the top hinge (FIG-4.1) Screw the pin on the left hole of the top hinge (FIG-4.2)

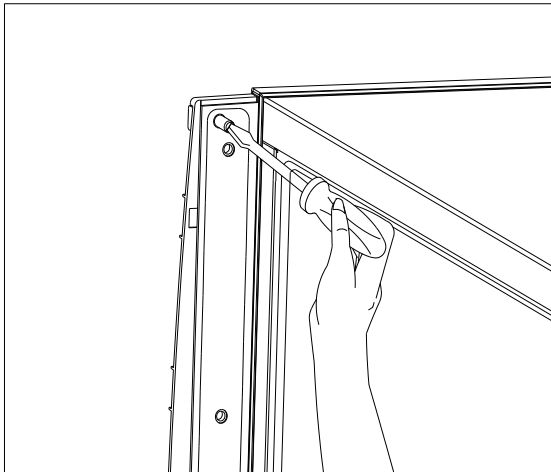


Figure - 4.1

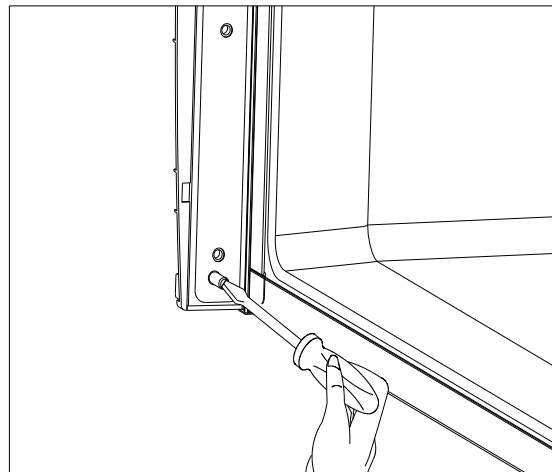


Figure - 4.2

<b>VESTEL</b> <b>WHITE GOODS</b>	<b>FREEZER - 1005</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSAMBLE</b>	

**5-** Replace the top bushing and top bushing cap. (FIG-5)  
 (You can use the bushing cap that is put in the user manuel bag)  
 Remove the bottom bushing and assemble it to the left side. (FIG-5)

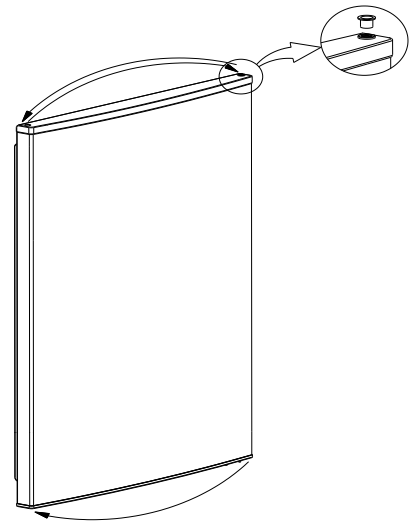



Figure - 5

**6-** Assemble the door to the top hinge. (Reverse operation of item 3)

**7-** Screw the bottom hinge to the left side of the refrigerator and screw the both leveling feet.

## **B - Thermostat Knob**

The freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position 1 to 3, colder temperatures can be obtained. “•” position shows thermostat is closed and no cooling will be available.

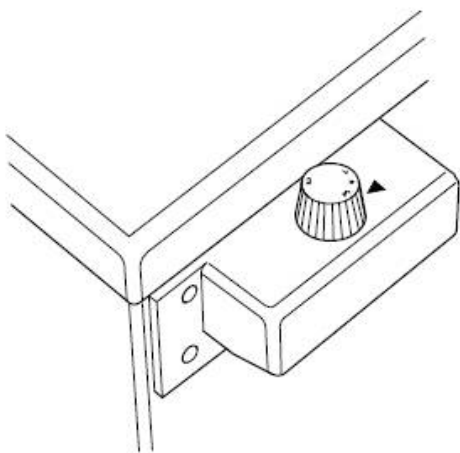

### **Freezer Thermostat Setting;**

- : The appliance is closed
- 1 : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.
- 2 : For long-term storage of food in the freezer compartment, you can set knob to medium position.
- 3 : Max. cooling position. The appliance will work longer.

*Note that; the ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the freezer compartment. If required, change the temperature setting.*

**MARCH 2016**

<b>VESTEL</b> WHITE GOODS	<b>FREEZER - 1005</b>	<b>CUSTOMER SUPPORT</b>
	<b>REFRIGERANT CYCLE DIAGRAM</b>	

