


QUICK USER MANUAL

Washer & Dryer



IMPORTANT ISSUES FOR DRYING PROCESS

 
 
- Only the “machine dryable” labelled () clothes can be dried in your machine.
- Do not dry your woollen, silk and sensitive clothes in your machine.
- If you continue to operate your washing machine whilst overloaded, washing and drying performances will be affected. Additionally, your washing machine can be damaged and you may see your clothes get yellow after drying programs.
- Dry your white and coloured clothes separately. It is recommended that, separate your coloured clothes, colour by colour.
- Select the most appropriate program for the material and the amount of your laundry before starting, drying, washing or washing/drying process.



PLEASE CHECK INSTRUCTION MANUAL FOR DETAILED INFORMATION.


QUICK USER MANUAL

Washer & Dryer

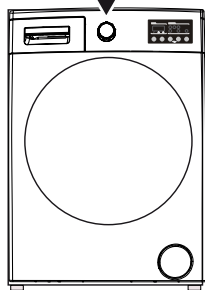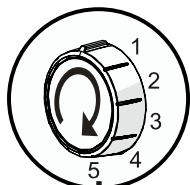


1

 Select the program and additional functions.

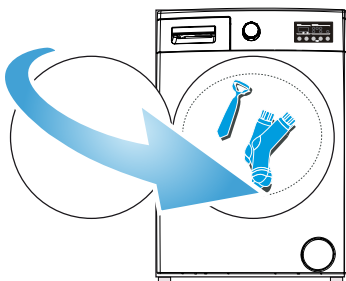


2

 Separate the laundry by type and colour. Place the laundry into your machine.

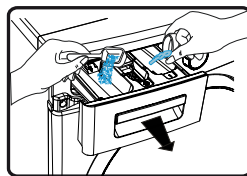

3

 Add softener and detergent.

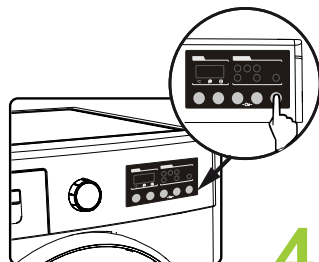

4

 
Start your machine by touching Start/Pause button.

CARE AND CLEANING INSTRUCTIONS

The filter located at water inlet valves should be cleaned every two months or regularly.



The detergent drawer should be cleaned every two months.

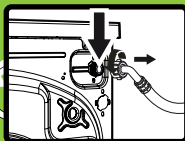

Water inlet hose filter should be cleaned every two months.



Pump filter should be cleaned every two months.

