



Configurar Impressora Tabby Wifi

1、Abra a aplicação “Printer TEST V3.2C” que se encontra no seguinte link:

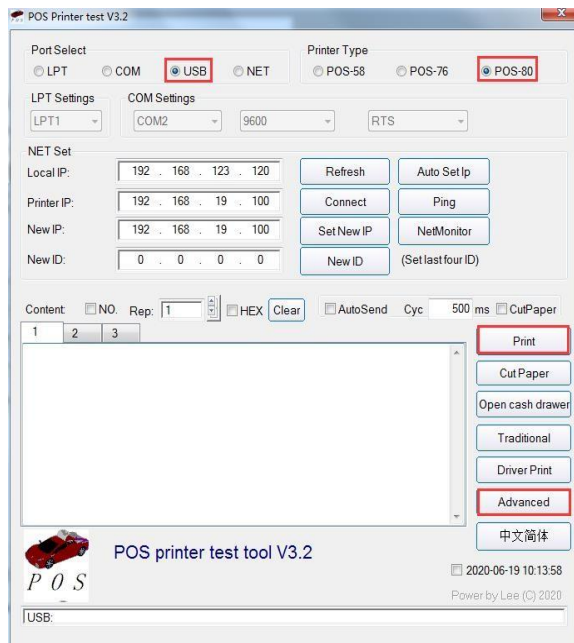

1. Escolha o modelo da sua impressora “POS-80”
2. Escolha a opção “USB”
3. Clique no botão “Print” para testar se a impressora está a comunicar
4. Se a impressora imprimir, temos a confirmação que a impressora comunica. Clique na opção “Advanced” para prosseguir.

、Depois de escolher a opção **Advanced** a seguinte janela é apresentada:

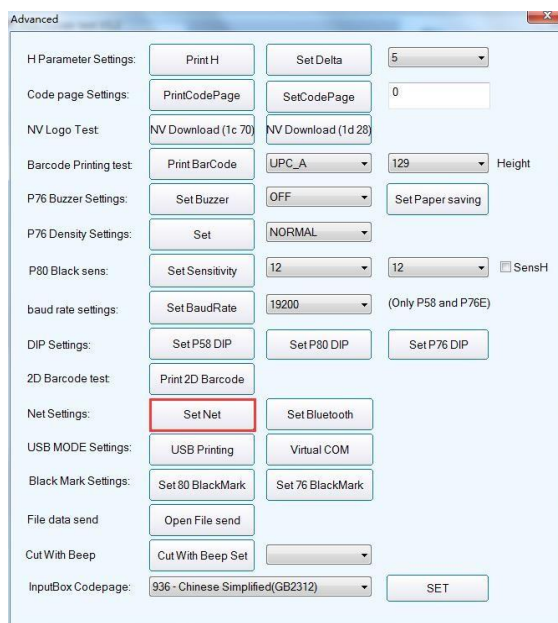

Clique nas opção “Set Net” para configurar as opções de rede.

The screenshot shows a 'Net Settings' window with two main sections: 'Net Settings' and 'WIFI Settings'. In the 'Net Settings' section, the IP Address is set to 192.168.123.100 (highlighted with a red box and number 1), NetMask is 255.255.255.0 (highlighted with a red box and number 2), and GateWay is 192.168.123.1 (highlighted with a red box and number 3). There are 'SetIPAddr', 'SetNetMask', and 'SetGateWay' buttons next to each field, and a 'Set above contents' button below them. In the 'WIFI Settings' section, the SSID is 'Printer001' (highlighted with a red box and number 4), the WIFI Key is '123456789' (highlighted with a red box and number 5), and the Key Type is 'WPA2_AES_PSK' (highlighted with a red box and number 6). There are 'Set above contents' and 'CMD Set' buttons below these fields. On the right side, there is a 'Set All' button (highlighted with a red box and number 7) and a 'Return' button. A small 'P O S' logo is also visible.

1. Configure o endereço IP da impressora.
2. Configure a máscara de sub-rede.
3. Configure o Gateway.
4. Configure WIFI SSID **Nota:** Por exemplo, se o nome da sua rede (SSID) for: Printer001, preencha este campo de acordo com a image.
5. Configure a senha Wifi **Nota:** Por exemplo, se a senha atual da sua rede WIFI for: 123456789, preencha o campo de acordo com a imagem.
6. Tipo de Criptografia da rede WIFI **Nota:** Por exemplo, se o tipo de criptografia for: WPA_TKIP_AES_PSK, preencha de acordo com a imagem. **ESTA CONFIGURAÇÃO É INDISPENSÁVEL**
7. Após preencher as informações acima, clique na opção “SET ALL”. A impressora emitirá um “BIP”. Para finalizar reinicie a impressora.

