




Configure STA Mode on Tabby WiFi


1. Perform a printer self-test to get the IP address that the equipment has in **AP Mode**

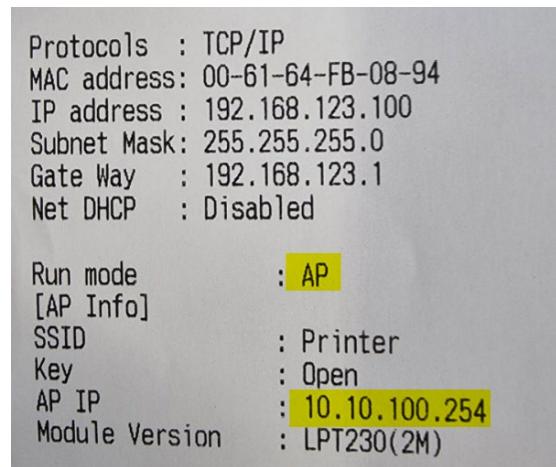


2. Access the **Wi-Fi network manager** on a mobile phone or PC and choose the network "Printer"




3. Open the browser and enter the IP address that was on the self-test:
10.10.100.254. When prompted for a username and password, enter **admin** for both the username and password

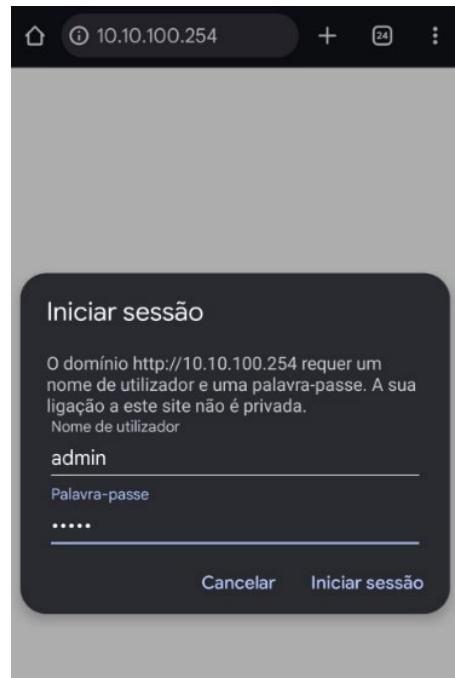


4. Select the **STA Setting** option to choose the Wi-Fi network where you want the printer to connect, and press the **Scan** button

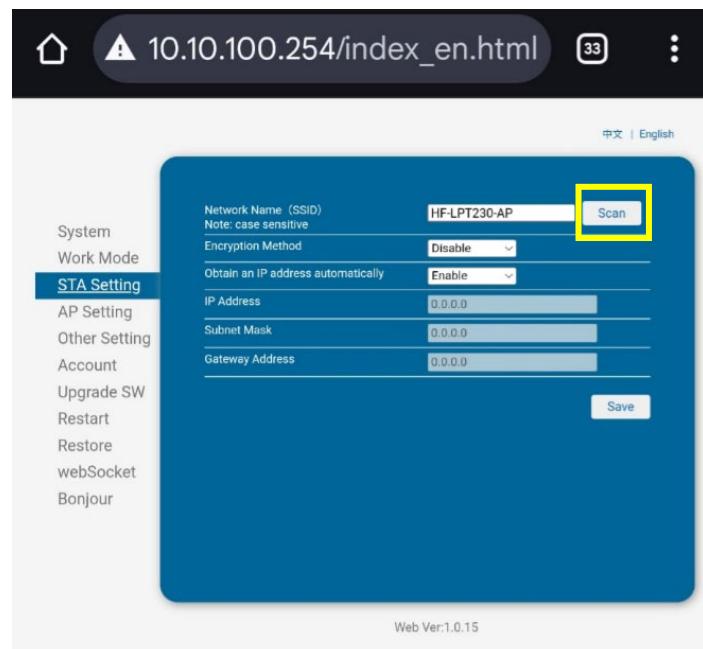


5. After the search, we must select the desired network and press **OK**

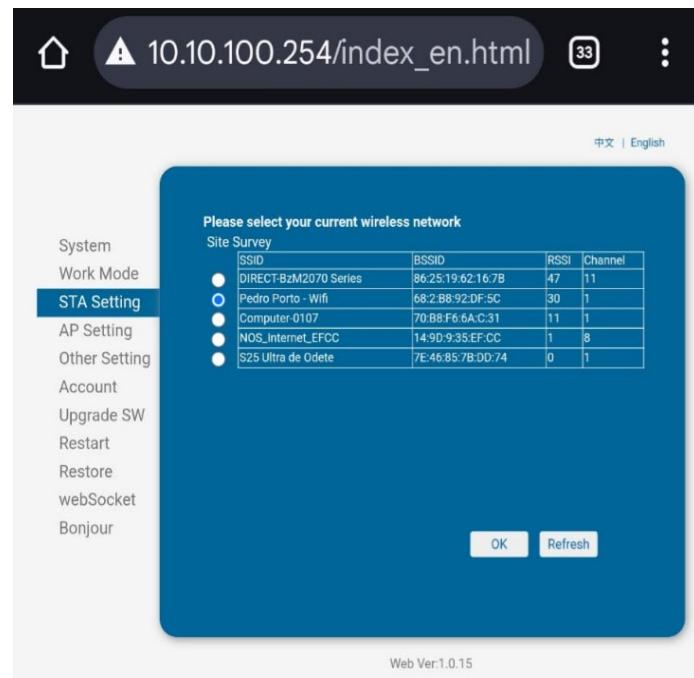

6. We will receive an alert, and we press **OK**

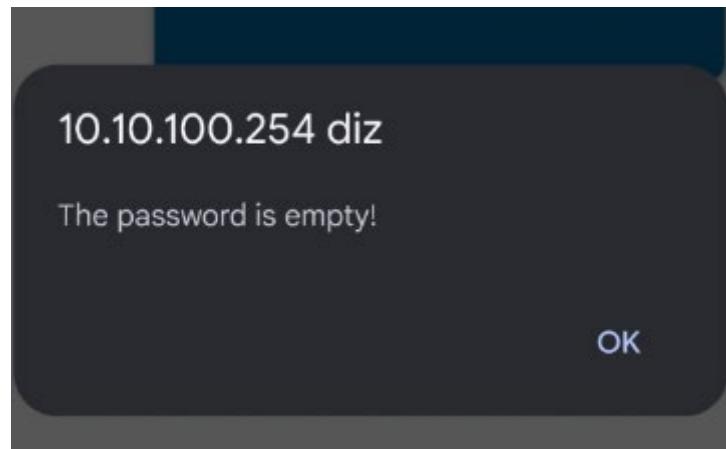

7. Here, enter the **Password** (1), change the **Automatic IP Assignment** to **Disable** (2), and configure the desired **IP, Subnet Mask, and Gateway** (3, 4, 5), then press **Save**

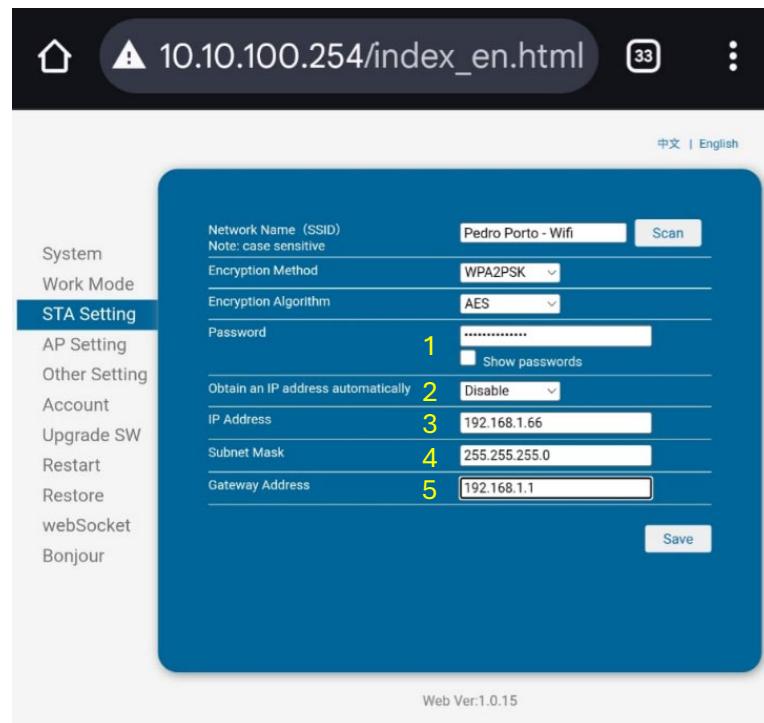

8. Finally, access **Work Mode** and change from **AP Mode** to **STA Mode**, then press **SAVE**

