

DAEWOO

Service Manual

Microwave Oven

Model: KOR-63B5



DAEWOO ELECTRONICS CO., LTD.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not operate or allow the oven to be operated with the door open.
- (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: (1) Interlock operation, (2) Proper door closing, (3) Seal and sealing surfaces (arcing, wear, and other damage), (4) Damage to or loosening of hinges and latches, (5) Evidence of dropping or abuse.
- (c) Before turning on power to the microwave oven for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
- (d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- (e) A microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.

TABLE OF CONTENTS

SAFETY AND PRECAUTIONS	2
1. FOR SAFE OPERATION	2
2. FOR SAFE SERVICE PROCEDURES.	2
SPECIFICATIONS	3
EXTERNAL VIEW	4
1. OUTER DIMENSION(KOR-63B5)	4
2. FEATURE DIAGRAM	4
INSTALLATION	5
OPERATIONS AND FUNCTIONS	6
DISASSEMBLY AND ASSEMBLY	7
INTERLOCK MECHANISM AND ADJUSTMENT	13
TROUBLE SHOOTING GUIDE	14
MEASUREMENT AND TEST	16
1. MEASUREMENT OF THE MICROWAVE POWER OUTPUT	16
2. MICROWAVE RADIATION TEST	17
3. COMPONENT TEST PROCEDURE	18
WIRING DIAGRAM	19
EXPLODED VIEW AND PARTS LIST	20
1. DOOR ASSEMBLY	20
2. CONTROL PANEL ASSEMBLY	20
3. TOTAL ASSEMBLY	20

SAFETY AND PRECAUTIONS

CAUTION

This Device is to be Serviced Only by Properly Qualified Service Personnel. Consult the Service Manual for Proper Service Procedures to Assure Continued Safety Operation and for Precautions to be Taken to Avoid Possible Exposure to Excessive Microwave Energy.

1. FOR SAFE OPERATION

Damage that allows the microwave energy ((that cooks or heats the food) to escape will result in poor cooking and may cause serious bodily injury to the operator.

IF ANY OF THE FOLLOWING CONDITIONS EXIST, OPERATOR MUST NOT USE THE APPLIANCE.

(Only a trained service personnel should make repairs.)

- 1) A broken door hinge.
- 2) A broken door viewing screen.
- 3) A broken front panel, oven cavity.
- 4) A loosened door lock.
- 5) A broken door lock.

The door gasket plate and oven cavity surface should be kept clean.

No grease, soil or spatter should be allowed to build up on these surfaces or inside the oven.

DO NOT ATTEMPT TO OPERATE THIS APPLIANCE WITH THE DOOR OPEN. The microwave oven has concealed switches to make sure the power is turned off when the door is opened. Do not attempt to defeat them.

DO NOT ATTEMPT TO SERVICE THIS APPLIANCE UNTIL YOU HAVE READ THIS SERVICE MANUAL.

2. FOR SAFE SERVICE PROCEDURES

- 1) If the oven is operative prior to servicing, a microwave emission check should be performed prior to servicing the oven.
- 2) If any certified oven unit is found to servicing, a microwave emission check should be performed prior to servicing the oven.
 - (a) inform the manufacturer, importer or assembler,
 - (b) repair the unit at no cost to the owner,
 - (c) attempt to ascertain the cause of the excessive leakage,
 - (d) tell the owner of the unit not to use the unit until the oven has been brought into compliance.
- 3) If the oven operates with the door open, the service person should tell the user not to operate the oven and contact the manufacturer and CDRH immediately.

CAUTION

MICROWAVE RADIATION

PERSONNEL SHOULD NOT BE EXPOSED TO THE MICROWAVE ENERGY WHICH MAY RADIATE FROM THE MAGNETRON OR OTHER MICROWAVE GENERATING DEVICE IF IT IS IMPROPERLY USED OR CONNECTED. ALL INPUT AND OUTPUT MICROWAVE CONNECTIONS. WAVEGUIDE FLANGES AND GASKETS MUST BE SECURE. NEVER OPERATE THE DEVICE WITHOUT A MICROWAVE ENERGY ABSORBING LOAD ATTACHED. NEVER LOOK INTO AN OPEN WAVEGUIDE OR ANTENNA WHILE THE DEVICE IS ENERGIZED.


SPECIFICATIONS

MODEL		KOR-63B5	
POWER SUPPLY		120V-60Hz, SINGLE PHASE WITH GROUNDING	
POWER CONSUMPTION	MICROWAVE	1200W	
	GRILL		
	COMBINATION		
MICROWAVE ENERGY OUTPUT		800W	
MICROWAVE FREQUENCY		2450MHz	
OUTSIDE DIMENSIONS (W X H X D)		465 x 279 x 354 mm (18.3 x 11.0 x 13.9 in.)	
CAVITY DIMENSIONS (W X H X D)		290 x 211 x 306 mm (11.4 x 8.3 x 12.0 in.)	
NET WEIGHT		APPROX. 12Kg (26.5lbs.)	
TIMER		35 min. DUAL SPEED	
FUNCTION SELECTIONS		MICROWAVE	
POWER SELECTIONS		5 LEVELS	
CAVITY VOLUME		0.7 Cu.Ft.	


- SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

EXTERNAL VIEW

1. OUTER DIMENSION(KOR-63B5/KOR-86B5)

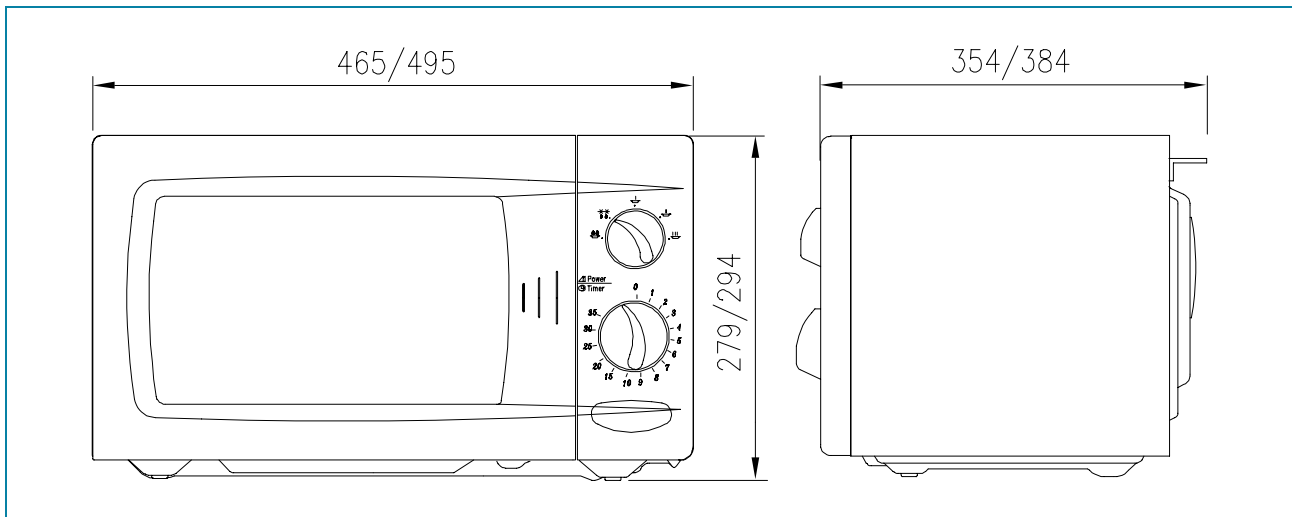

2. FEATURE DIAGRAM

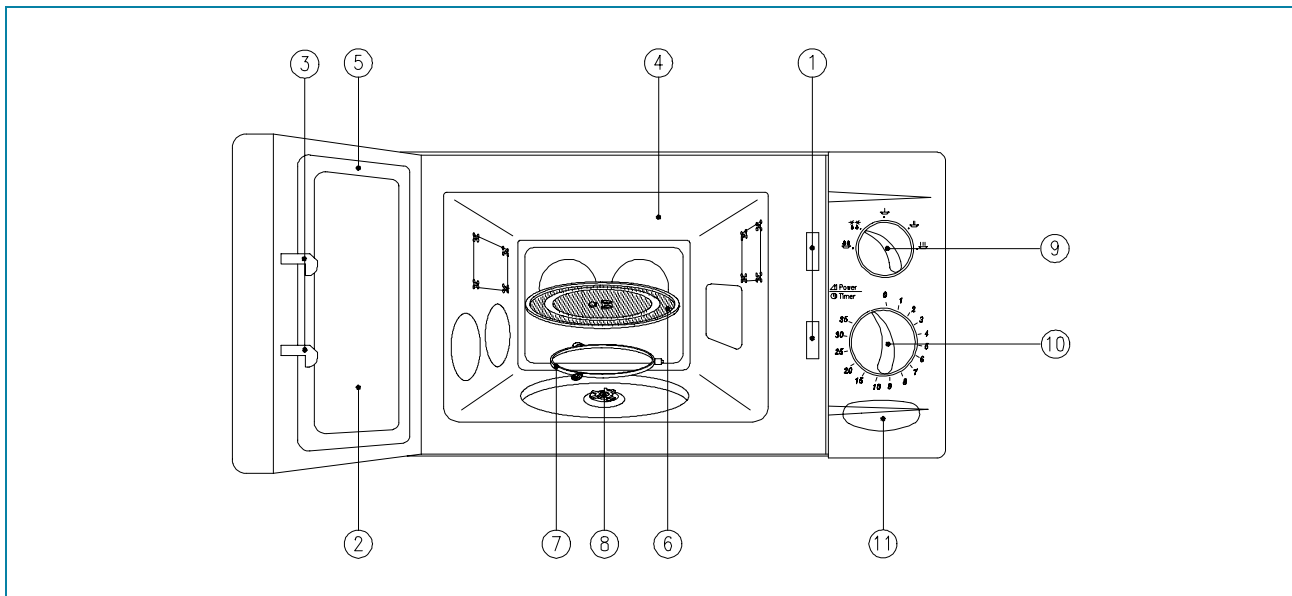

1. Safety interlock system

2. **Door viewing screen** - Allows viewing of food. The screen is designed so that light can pass through, but not the microwave.

3. **Door hook** - When the door is closed, it will automatically shut. If the door is opened while the oven is operating, the magnetron will immediately stop operating.

4. Oven cavity

5. **Door seal** - Door seal maintains the microwave energy within the oven cavity and prevents microwave leakage.

6. **Glass cooking tray** - Made of special heat resistant glass. Food in a proper receptacle is placed on this tray for cooking.

7. **Roller guide** - This must always be used for cooking together with the glass cooking tray.

8. **Coupler** - This fits over the shaft in the center of the ovens cavity floor. This is to remain in the oven for all cooking.

9. **Knob V.P.C** - Used to select a microwave power level.

10. **Knob timer** - Used in setting cooking time for all functions.

11. **Door release button** - By pushing this button the latch system cut off all circuits and stops the oven before the door is opened.

INSTALLATION

1. Steady, flat location

This microwave oven should be set on a steady, flat surface.

2. Leave space behind and side

All air vents should be kept a clearance. If all vents are covered during operation, the oven may overheat and, eventually, cause oven failure.

3. Away from radio and TV sets

Poor television reception and radio interference may result if the oven is located close to a TV, radio, antenna or feeder and so on.

4. Away from heating appliances and water taps

Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur.

5. Power supply

• Check your local power source.

This microwave oven requires a current of approximately 12 amperes, 120 Volts, 60 Hz grounded outlet.

• Power supply cord is about 0.8 meters long.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.


2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.

3. If a long cord or extension cord is used:

1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

2) The extension cord must be a grounding type 3-wire cord.

3) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

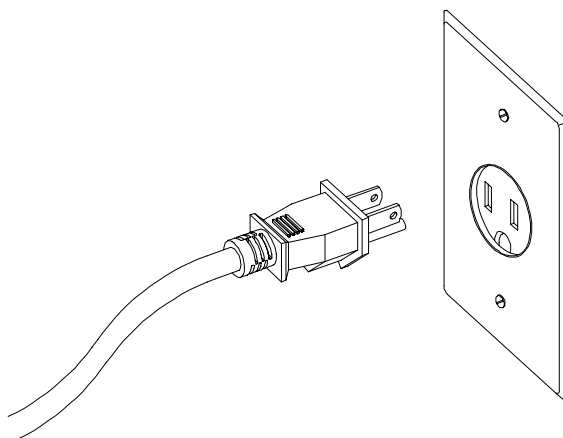


6. Examine the oven after unpacking for any damage such as:

A misaligned door, broken door or a dent in cavity.

If any of the above are visible, DO NOT INSTALL, and notify dealer immediately.

OPERATIONS AND FUNCTIONS

1. Connect the main lead to an electrical outlet.
2. After placing the food in a suitable container, open the oven door and put it on the glass tray. The glass tray must always be in place during cooking.
3. Close the door securely.
4. Choose cooking power level by setting V.P.C knob to the desired position. Refer to cookbook for recommended power levels.
5. Determine cooking time.
Consult cookbook for recipe timing.
Oven light turns on and cooling fan starts to operate.
Microwave cooking starts.
6. You may open the door while the oven is operating.
As soon as the door is opened, the safety mechanism stop the generation of microwave power and the operation of cooking timer.
If you wish to change the time during cooking, simply adjust the timer to the desired time.
7. When the timer reaches zero, a bell will ring and the unit will turn off.
Oven light turns off. If additional cooking time is needed and the door is closed, the oven will automatically start when the timer is reset.

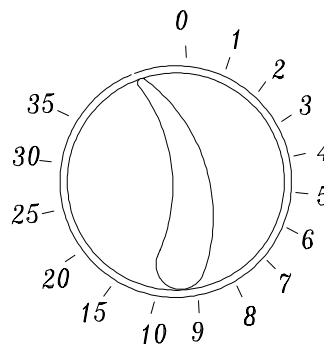

NOTE

1. When setting timer for less than 2 minutes, turn the timer past 2 minutes and then return to the correct timer setting.
2. Various clicking noises may be heard when turning V.P.C knob. This is normal and does not affect the operation of your microwave oven.

Make sure the oven is properly installed and plugged into the electrical outlet.

Variable power cooking

- On and OFF cycle time of mechanical V.P.C switch is 30 seconds.

When the V.P.C knob is set to the desired position and timer knob turns to the desired position, the V.P.C switch has a cycle (ON/OFF time(sec.)) listed below.

Variable power setting			ON/OFF time (sec.)	Approximate Percentage of Power
Power level	Symbol			
	KOR-63B5	KOR-86B5		
HIGH	MAX	MAX	30/0	100 %
MED HIGH	610W	690W	23.2/6.8	77 %
MEDIUM	440W	490W	16.5/13.5	55 %
DEFROST	☞☞☞ 260W	☞☞☞ 290W	9.8/20.2	33 %
WARM	130W	150W	5/25	17 %

DISASSEMBLY AND ASSEMBLY

Cautions to be observed when trouble shooting

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. It is completely safe during normal operation. However, carelessness in servicing the oven can result in an electric shock or possible danger from a short circuit. You are asked to observe the following precautions carefully.

1. Always remove the power plug from the outlet before servicing.
2. Use an insulated screwdriver and wear rubber gloves when servicing the high voltage side.
3. Discharge the high voltage capacitor before touching any oven components or wiring.

(1) Check the grounding.


Do not operate on a two-wire extension cord.

The microwave oven is designed to be used while grounding. It is imperative, therefore, to make sure it is grounded properly before beginning repair work.

(2) Warning about the electric charge in the high voltage capacitor.

For about 30 seconds after the operation has stopped an electric charge remains in the high voltage capacitor. When replacing or checking parts, short between oven chassis and the negative high terminal of the high voltage capacitor by using a properly insulated screwdriver to discharge.

4. When the 15A fuse is blown due to the operation of the monitor switch; replace primary interlock switch, secondary interlock switch and interlock monitor switch.
5. After repair or replacement of parts, make sure that the screws are properly tightened, and all electrical connections are tightened.
6. Do not operate without cabinet.

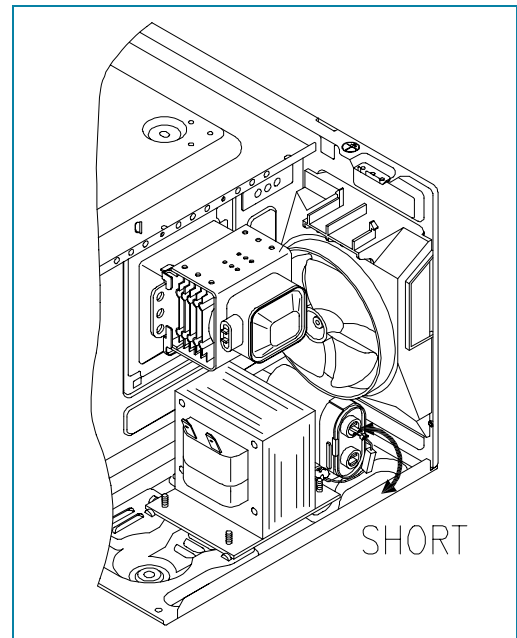

CAUTION


Service personnel should remove their watches whenever working close to or replacing the magnetron.

WARNING

When servicing the appliance, take a care when touching or replacing high potential parts because of electrical shock or exposing microwave. These parts are as follows - HV Transformer, Magnetron, HV Capacitor, HV Diode.


1. To remove cabinet

- 1) Remove three screws on cabinet back.
- 2) Push the cabinet backward.

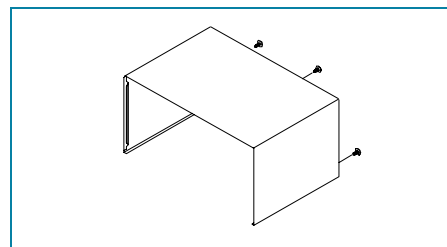

2. To remove door assembly


- 1) Remove a screw which secure the stopper hinge top.
- 2) Remove the door assembly from top plate of cavity.
- 3) Reverse the above for reassembly.

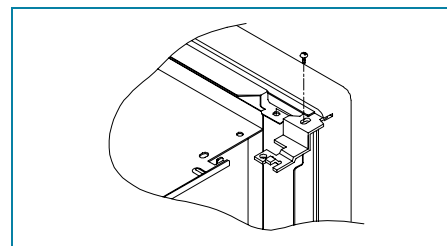

NOTE

After replacing the door assembly, perform a check of correct alignment with the hinge and cavity front plate.

3. To remove door parts

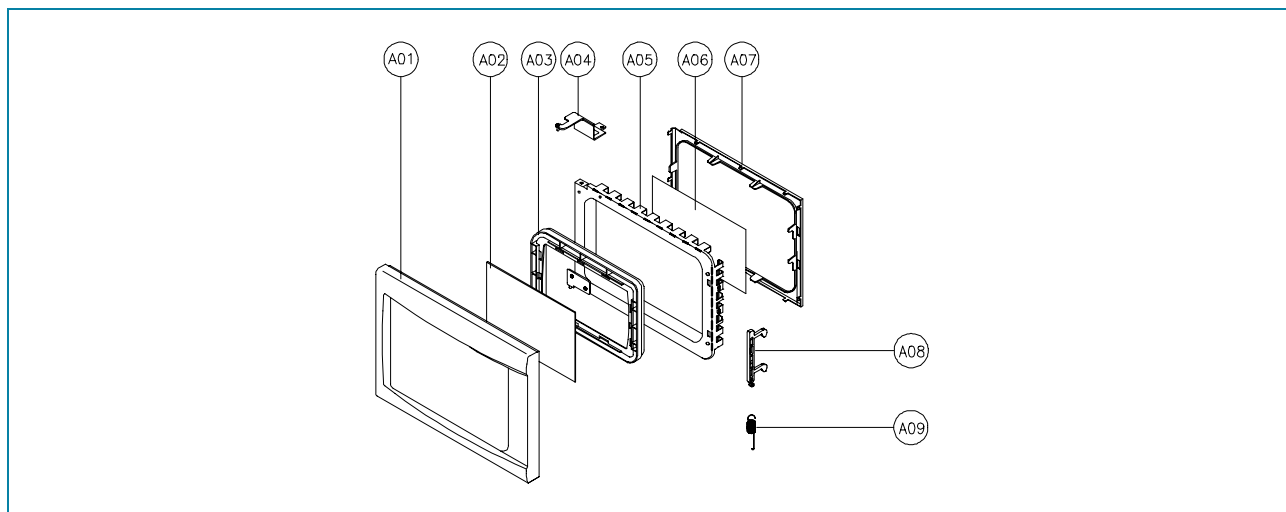

(1) KOR-63B5

REF.NO	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
A01	3512202070	FRAME DOOR	ABS XR-401 H-2938	1	
A02	3517003050	BARRIER-SCREEN*O	ACRYL	1	
A03	3515304610	SUPPORTER BARR-S*O	PP	1	
A04	3515204100	STOPPER HINGE *T AS	KOR-63150S	1	
A05	3511705500	DOOR WELD AS	KOR-61150S	1	
A06	3517002800	BARRIER-SCREEN *I	POLYESTER T0.1	1	
A07	3512300200	GASKET DOOR	PP	1	
A08	3513100700	HOOK	POM	1	
A09	3515101300	SPRING HOOK	PW1	1	

4. Method to reduce the gap between the door seal and the oven front surface

1) To reduce gap located on part 'A'.

Loosen a screw on stopper hinge top, and then push the door to contact the door seal to oven front surface.


Tighten a screw.

2) To reduce gap located on part 'B'.

Loosen two screws on stopper hinge under, and then

push the door to contact the door seal to oven front surface.

Tighten two screws.

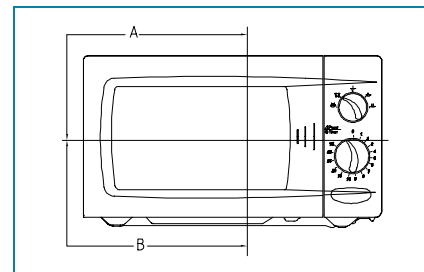


NOTE

A small gap may be acceptable if the microwave leakage does not exceed $4\text{mW}/\text{cm}^2$.

DISASSEMBLY AND ASSEMBLY

5. To remove control panel parts

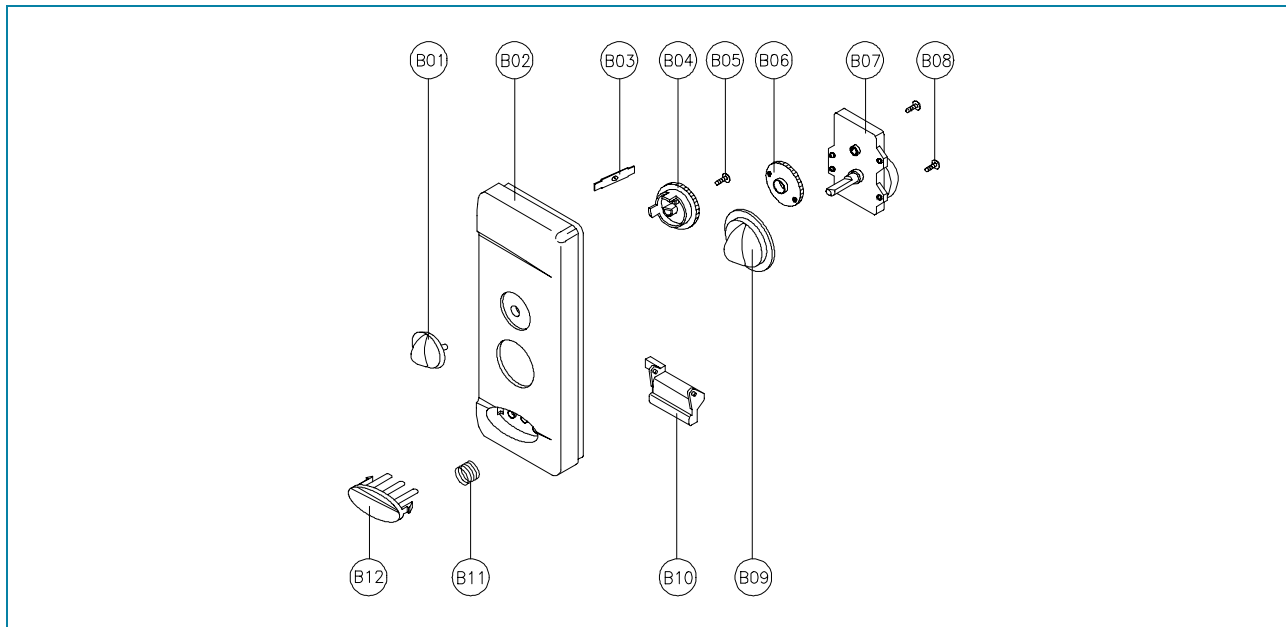


(1) KOR-63B5

REF.NO	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
B01	3513402690	KNOB VPC	ABS XR-401 H-2938	1	
B02		CONTROL-PANEL	ABS AF-345, HFA-700HT	1	
B03	3515101600	SPRING FLAT	SUS 301 T0.5	1	
B04	3517400500	COUPLER VPC KNOB	POM	1	
B05	7122401211	SCREW TAPPING	T2S TRS 4x12 MFZN	1	
B06	3517400400	COUPLER TIMER	POM	1	
B07	3518204300	TIMER	KN35MKD 15U-P	1	
B08	7122401211	SCREW TAPPING	T2S TRS 4x12 MFZN	2	
B09	3513402590	KNOB	ABS XR-401 H-2938	1	
B10	3513701440	LEVER DOOR OPEN	ABS XR-401 H-2938	1	
B11	441G430171	SPRING BUTTON	SWP DIA 0.7	1	
B12	3516903660	BUTTON DOOR OPEN	ABS XR-401 H-2938	1	


- 1) Remove the screw which secure the control panel, push up two snap fits and draw forward the control panel assembly.
- 2) Remove the door open lever from the control panel.
- 3) Remove two screws which secure the timer assembly.
- 4) Remove the timer assembly.
- 5) Pull out the timer knob from the timer.
- 6) Pull out the timer coupler from the timer.
- 7) Remove the screw which secure the V.P.C coupler.
- 8) Pull out the V.P.C coupler, V.P.C knob and flat spring from the control panel.
- 9) Remove the door open button and button spring from the control panel.
- 10) Reverse the above steps for reassembly.

6. To remove high voltage capacitor

- 1) Remove a screw which secure the grounding ring terminal of the H.V.diode and the capacitor holder.
- 2) Remove the H.V. diode from the capacitor holder.
- 3) Reverse the above steps for reassembly.

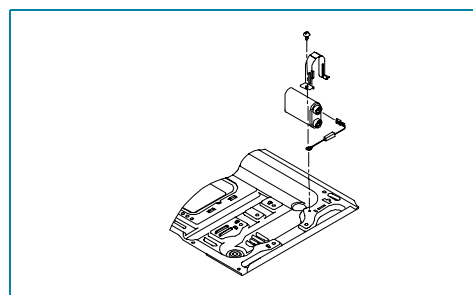


◆ High voltage circuit wiring

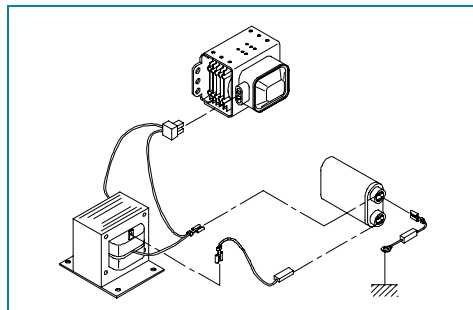



7. To remove magnetron.

- 1) Remove a screw which secure the magnetron.
- 2) Remove the magnetron.
- 3) Reverse the above steps for reassembly.

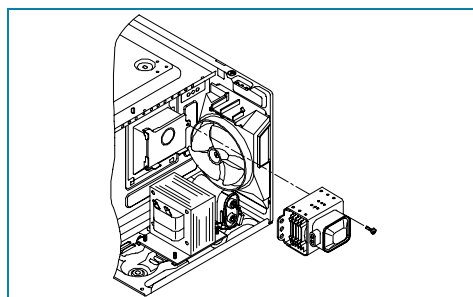


NOTE

Never install the magnetron without the metallic gasket plate which is packed with each magnetron to prevent microwave leakage. Whenever repair work is carried out on magnetron, check the microwave leakage. It shall not exceed 4mW/cm^2 for a fully assembled oven with door normally closed.

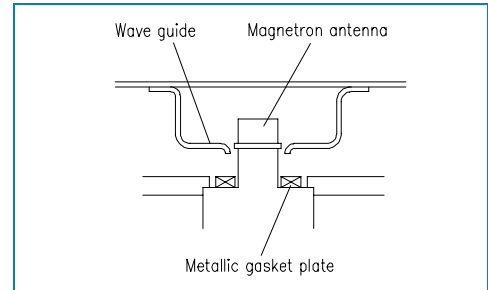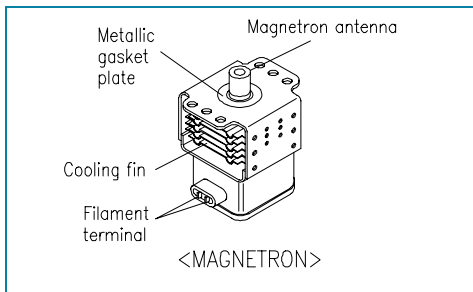


8. To remove wind guide assembly.

- 1) Remove a screw which secure the wind guide assembly.
- 2) Draw forward the wind guide assembly.
- 3) Pull the fan from the motor shaft.
- 4) Remove two screws which secure the motor shaded pole.
- 5) Remove the motor shaded pole.
- 6) Reverse the above steps for reassembly.

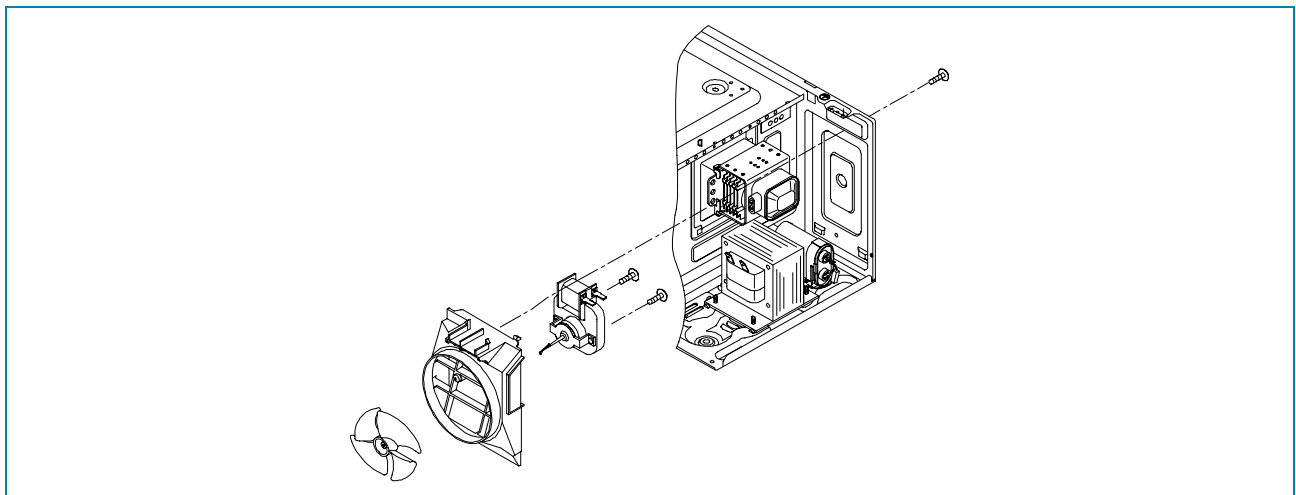

9. To remove H.V.transformer.

- 1) Remove four screws holding the H.V.transformer.
- 2) Remove the H.V.transformer.
- 3) Reverse the above steps for reassembly.

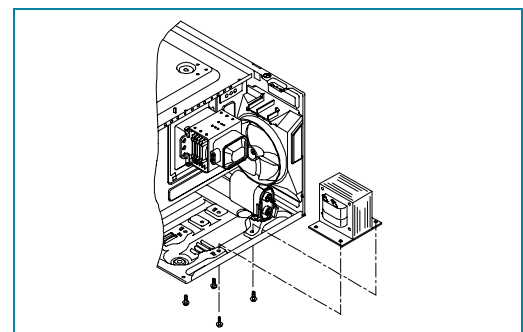

INTERLOCK MECHANISM AND ADJUSTMENT


The door lock mechanism is a device which has been specially designed to completely eliminate microwave radiation when the door is opened during operation, and thus to perfectly prevent the danger resulting from the leakage of microwave.

1. Primary interlock switch

When the door is closed, the hook locks the oven door. If the door is not closed properly, the oven will not operate. When the door is closed, the hook pushes the button of the microswitch. Then the button of the primary interlock switch bring it under "ON" condition.

2. Secondary interlock switch and interlock monitor switch

When the door is closed, the hook pushes the lock lever downward. The lock lever presses the button of the interlock monitor switch to bring it under "OFF" condition and presses the button of the secondary interlock switch to bring it under "ON" condition.

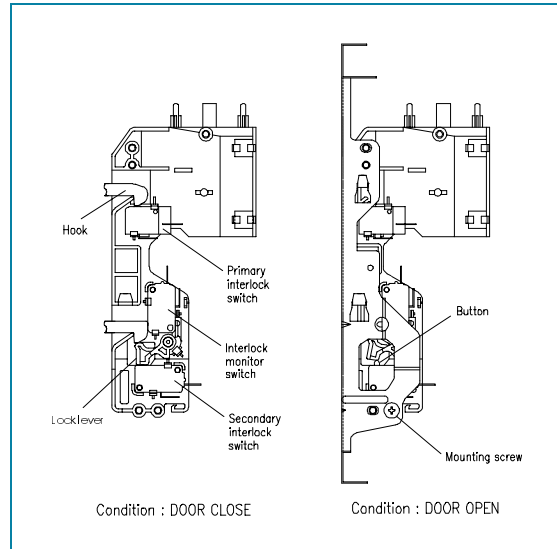

ADJUSTMENT

Interlock monitor switch

When the door is closed, the interlock monitor switch should be opened before other switches are closed.
When the door is opened, the interlock monitor switch should be closed after other switches are opened.

3. Adjustment steps

- Loosen the one mounting screw.
- Adjust interlock switch assembly position.
- Make sure that lock lever moves smoothly after adjustment is completed.
- Tighten completely one mounting screw.

NOTE


Microwave emission test should be performed after adjusting interlock mechanism.
If the microwave emission exceed $4\text{mW}/\text{cm}^2$, readjust interlock mechanism.


TROUBLE SHOOTING GUIDE

Following the procedures below to check if the oven is defective or not

1. Check grounding before checking trouble.
2. Be careful of the high voltage circuit.
3. Discharge the high voltage capacitor.
4. When checking the continuity of the switches, fuse or high voltage transformer, disconnect one lead wire from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.

(TROUBLE 1) Door shut, timer set, but no cooking takes place.

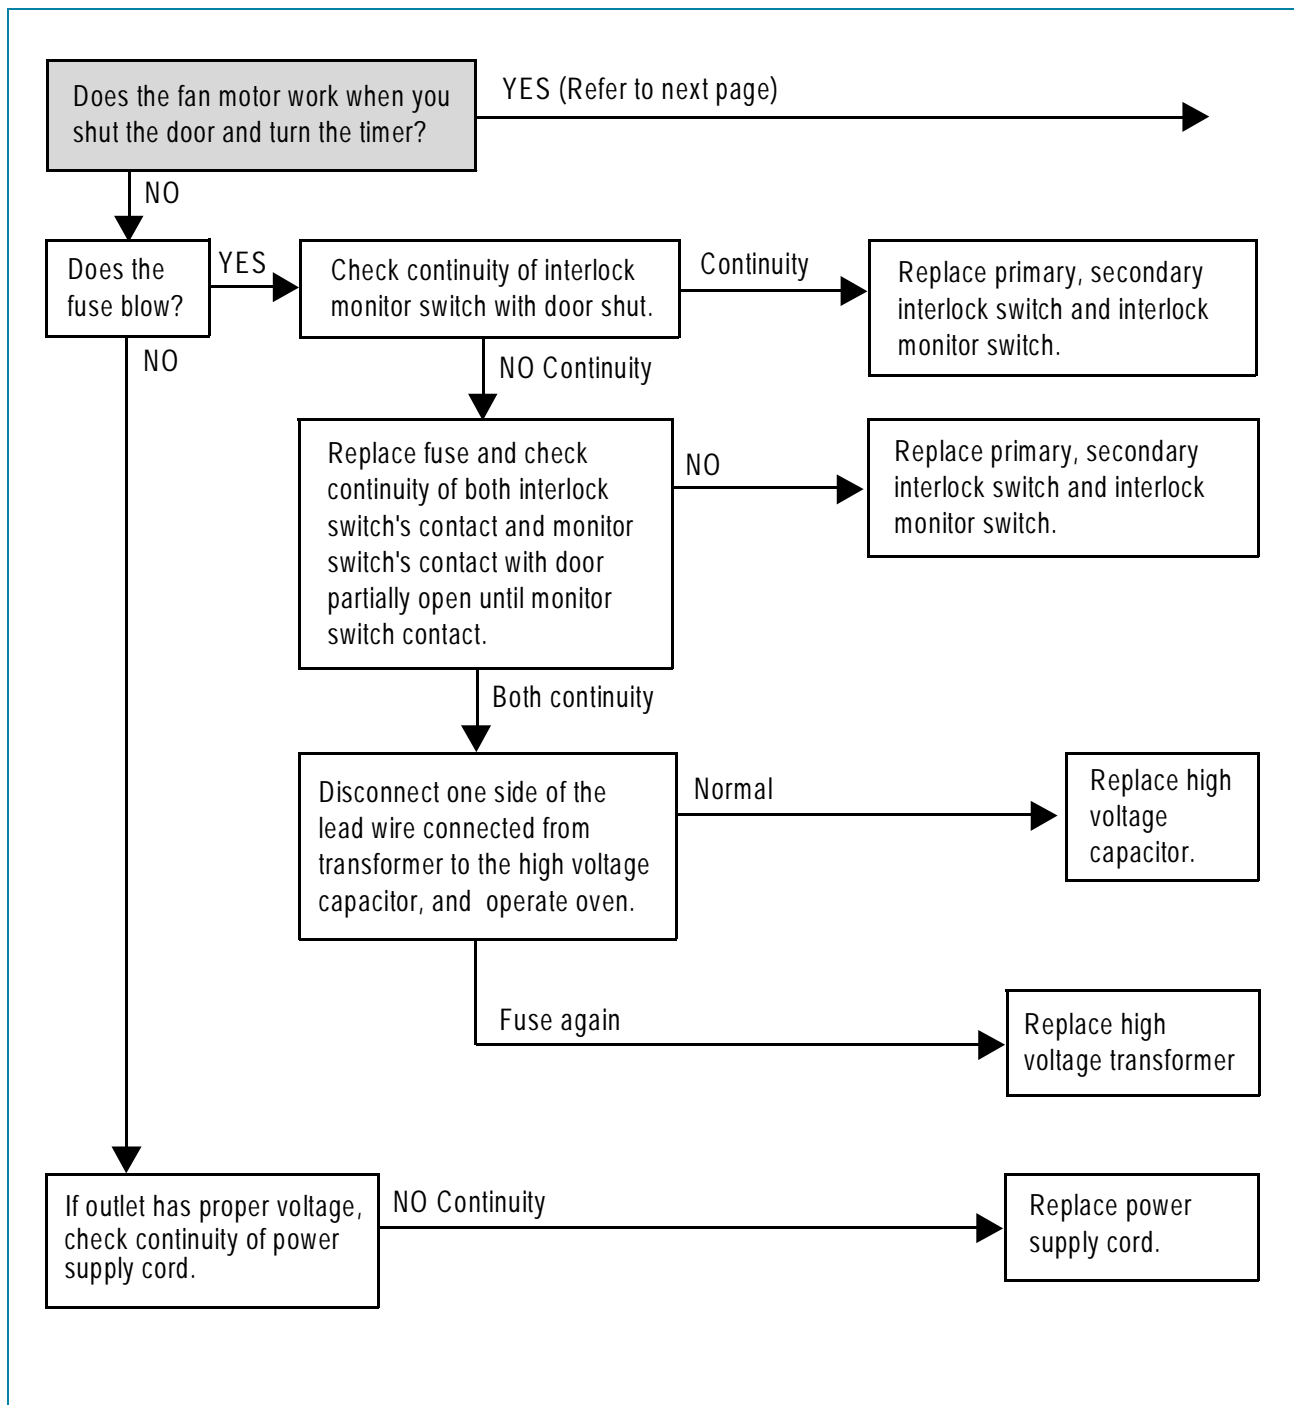

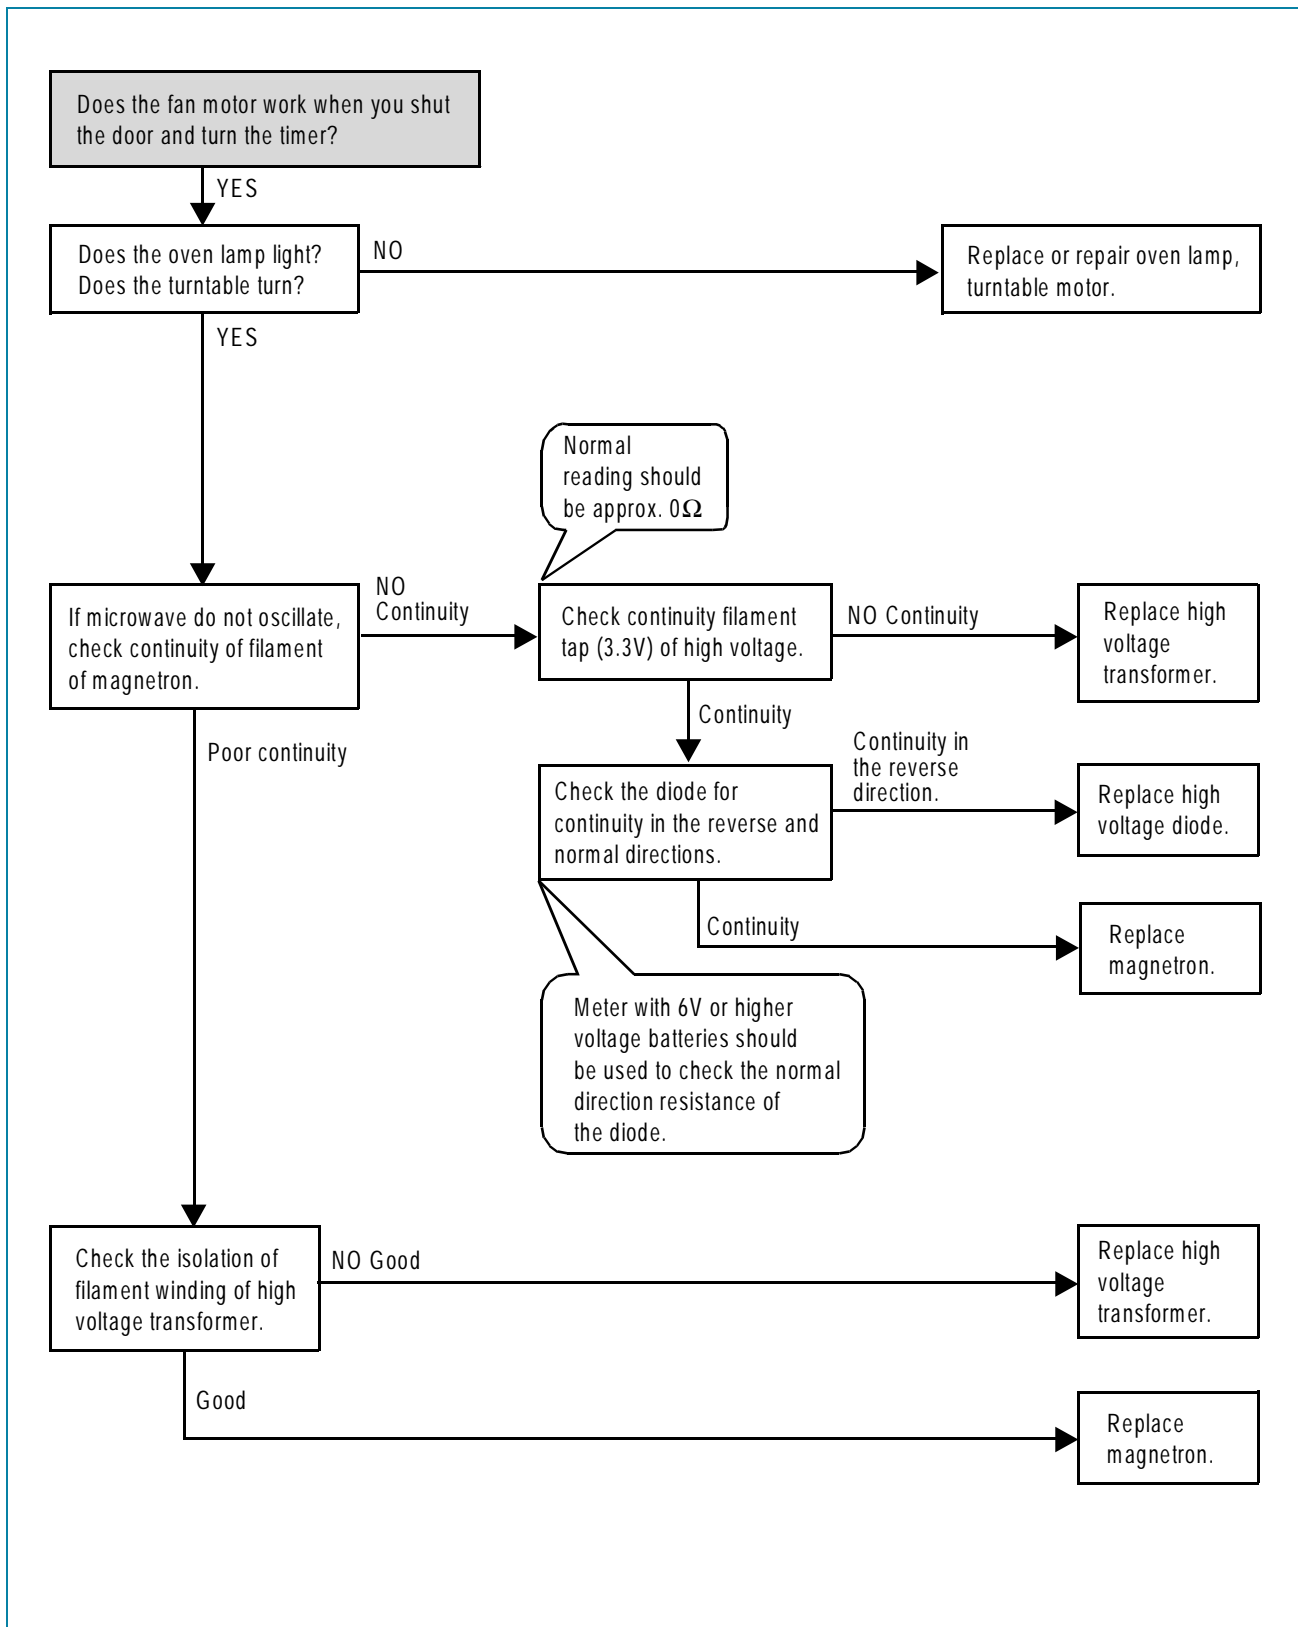

MEASUREMENT AND TEST

1. MEASUREMENT OF THE MICROWAVE POWER OUTPUT

Microwave output power can be checked by indirectly measuring the temperature rise of a certain amount of water exposed to the microwave as directed below.


PROCEDURE

1. Microwave power output measurement is made with the microwave oven supplied at rated voltage and operated at its maximum microwave power setting with a load of 1000 ± 5 cc of potable water.
2. The water is contained in a cylindrical borosilicate glass vessel having a maximum material thickness of 3 mm and an outside diameter of approximately 190 mm.
3. The oven and the empty vessel are at ambient temperature prior to the start of the test. The initial temperature of the water is $10 \pm 2^\circ\text{C}$ ($50 \pm 3.6^\circ\text{F}$). It is measured immediately before the water is added to the vessel. After addition of the water to the vessel, the load is immediately placed on the center of the shelf, which is in the lowest normal position.
4. Microwave power is switched on.
5. Heating time should be exactly A seconds (Refer to table as following).
Heating time is measured while the microwave generator is operating at full power. The filament heat-up time for magnetron is not included.
6. The initial and final temperature of water is selected so that the maximum difference between the ambient and final water temperature is 5K.
7. The microwave power output P in watts is calculated from the following formula:

$$P = 4187 \times \Delta T / t$$

- ΔT is difference between initial and ending temperature.
- t is the heating time.

The power measured should be B (Refer to SPECIFICATIONS) W $\pm 10.0\%$.

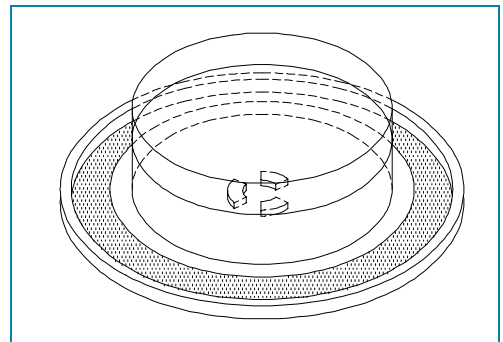

CAUTION

1. Water load should be measured exactly to 1 liter.
2. Input power voltage should be exactly specified voltage (Refer to SPECIFICATIONS).
3. Ambient temperature should be $20 \pm 2^\circ\text{C}$ ($68 \pm 3.6^\circ\text{F}$)

* Heating time for power output:

A (second)	70	64	60	56	52	49	47	44	42	40	38
B (W)	600	650	700	750	800	850	900	950	1000	1050	1100

2. MICROWAVE RADIATION TEST

WARNING

Make sure to check the microwave leakage before and after repair of adjustment.

Always start measuring of an unknown field to assure safety for operating personnel from microwave energy.


Do not place your hands into any suspected microwave radiation field unless the safe density level is known.

Care should be taken not to place the eyes in direct line with the source of microwave energy.

Slowly approach the unit under test until the radiometer reads an appreciable microwave leakage from the unit under the test.

PROCEDURE

1. Prepare Microwave Energy Survey Meter, 600cc glass beaker, and glass thermometer 100°C (212°F).
2. Pour 275cc ± 15cc of tap water initially at 20 ± 5 °C (68 ± 9°F) in the 600 cc glass beaker with an inside diameter of approx. 95 mm (3.5 in.).
3. Place it at the center of the tray and set it in a cavity.
4. Close the door and operate the oven.
5. Measure the leakage by using Microwave Energy Survey Meter with dual ranges, set to 2450MHz.
 - (1) Measured radiation leakage must not exceed the value prescribed below. Leakage for a fully assembled oven with door normally closed must be less than 4mW/cm².
 - (2) When measuring the leakage, always use the 5 cm (2 in.) space cone with probe. Hold the probe perpendicular to the cabinet and door. Place the space cone of the probe on the door, cabinet, door seem, door viewing screen, the exhaust air vents and the suction air vents.
 - (3) Measuring should be in a counter-clockwise direction at a rate of 1 in./sec. If the leakage of the cabinet door seem is unknown, move the probe more slowly.
 - (4) When measuring near a corner of the door, keep the probe perpendicular to the areas making sure the probe end at the base of the cone does not get closer than 2 in. from any metal. If it does not, erroneous reading may result.

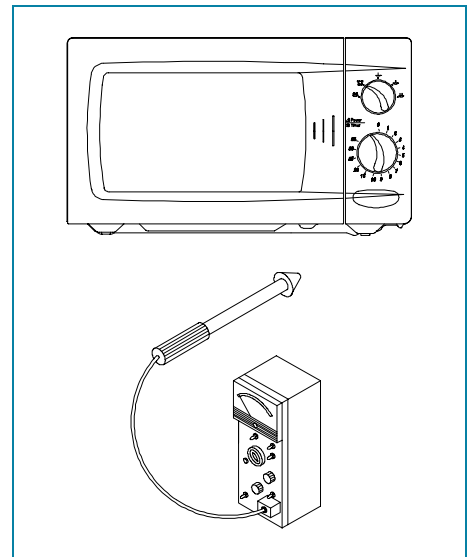

3. COMPONENT TEST PROCEDURE

High voltage is present at the high voltage terminal of the high voltage transformer during any cooking cycle.

It is neither necessary nor advisable to attempt measurement of the high voltage.

Before touching any oven components or wiring, always unplug the oven from its power source and discharge the capacitor.

1. High voltage transformer

(1) Remove connections from the transformer terminals and check continuity.

(2) Normal readings should be as follows :

Secondary winding ... Approx. $110\ \Omega \pm 10\%$

Filament winding ... Approx. $0\ \Omega$

Primary winding ... Approx. $1\ \Omega$

2. High voltage capacitor

(1) Check continuity of capacitor with meter on the highest OHM scale.

(2) A normal capacitor will show continuity for a short time, and then indicate $10M\ \Omega$ once the capacitor charged.

(3) A shorted capacitor will show continuous continuity.

(4) An open capacitor will show constant $10M\ \Omega$.

(5) Resistance between each terminal and chassis should be infinite.

3. High voltage diode

(1) Isolate the diode from the circuit by disconnecting the leads.

(2) With the ohmmeter set on the highest resistance scale measure the resistance across the diode terminals. Reverse the meter leads and again observe the resistance reading. Meter with 6v, 9v or higher voltage batteries should be used to check the front-back resistance of the diode, otherwise an infinite resistance may be read in both directions. A normal diode's resistance will be infinite in one direction and several hundred $k\ \Omega$ in the other direction.

4. Magnetron

For complete magnetron diagnosis, refer to "Measurement of the Microwave Power Output." Continuity checks can only indicate an open filament or a shorted magnetron.

To diagnose for an open filament or a shorted magnetron,

(1) Isolate magnetron from the circuit by disconnecting the leads.


(2) A continuity check across magnetron filament terminals should indicate $0.1\ \Omega$ or less.

(3) A continuity check between each filament terminal and magnetron case should read open.

5. Fuse

If the fuse in the primary and monitor switch circuit is blown when the door is opened, check the primary and monitor switch before replacing the blown fuse. In case the fuse is blown by an improper switch operation, replace the defective switch and fuse at the same time. Replace just the fuse if the switches operate normally.

WIRING DIAGRAM

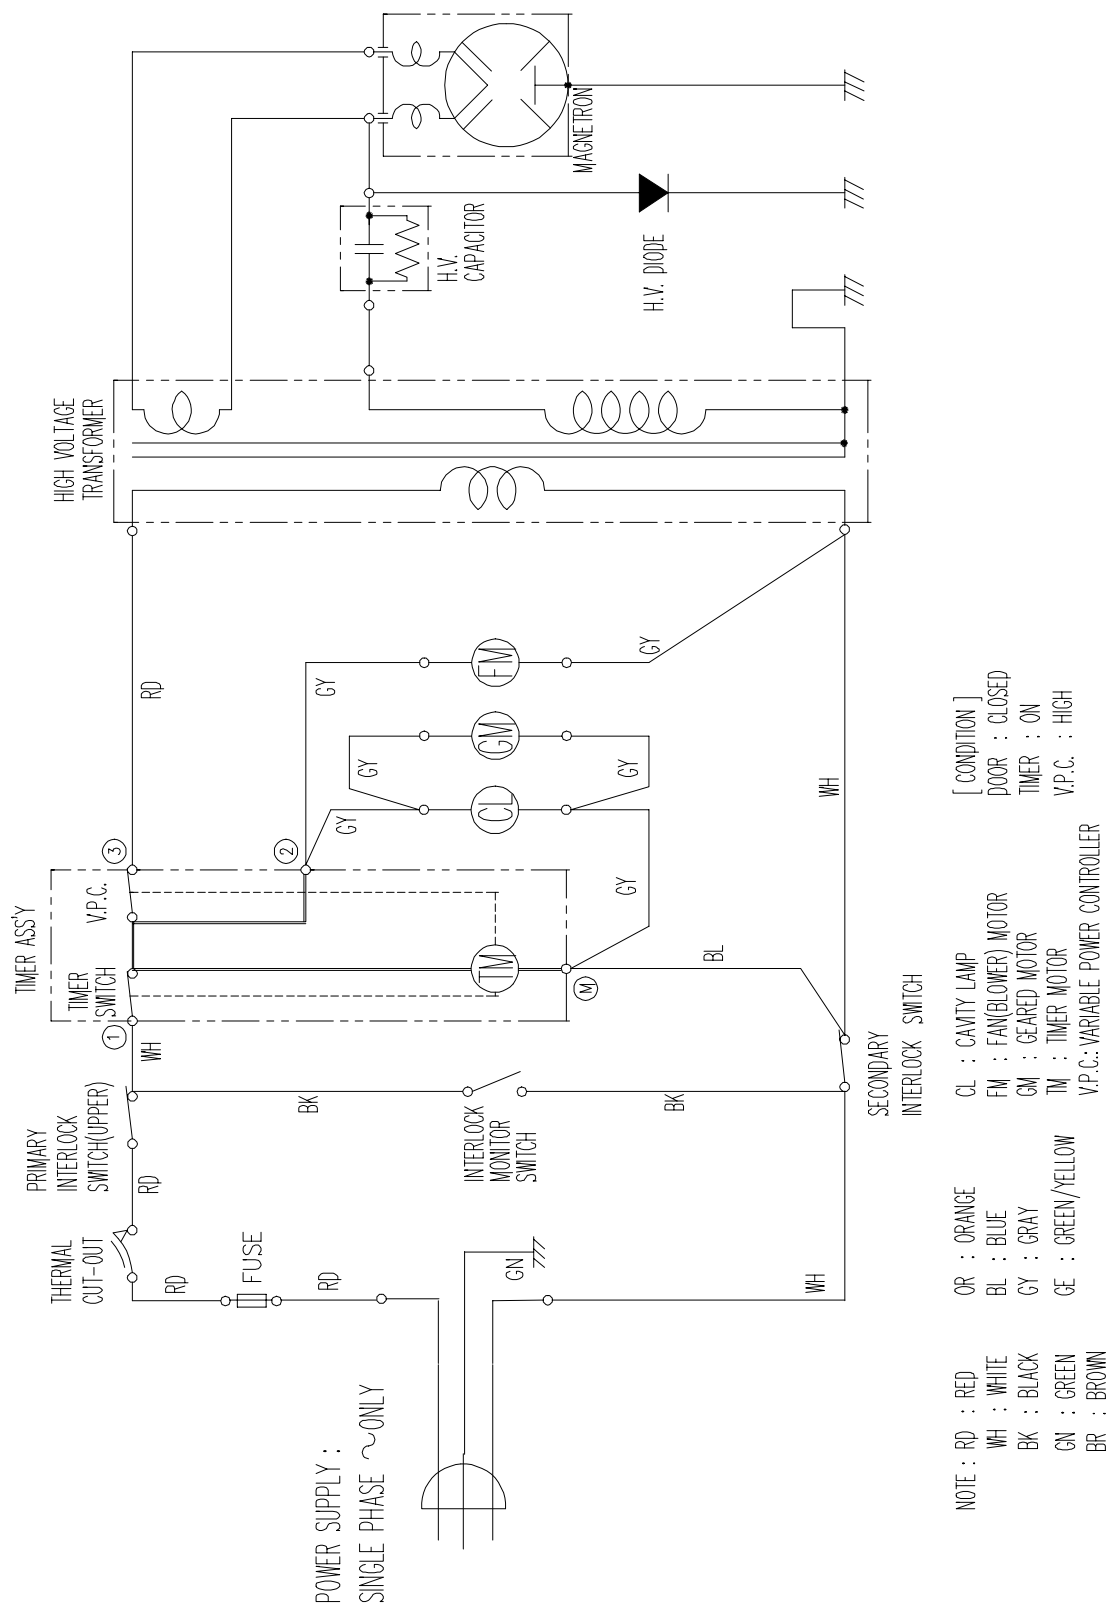

EXPLODED VIEW AND PARTS LIST


1. DOOR ASSEMBLY

Refer to Disassembly and assembly.

2. CONTROL PANEL ASSEMBLY

Refer to Disassembly and assembly.

3. TOTAL ASSEMBLY

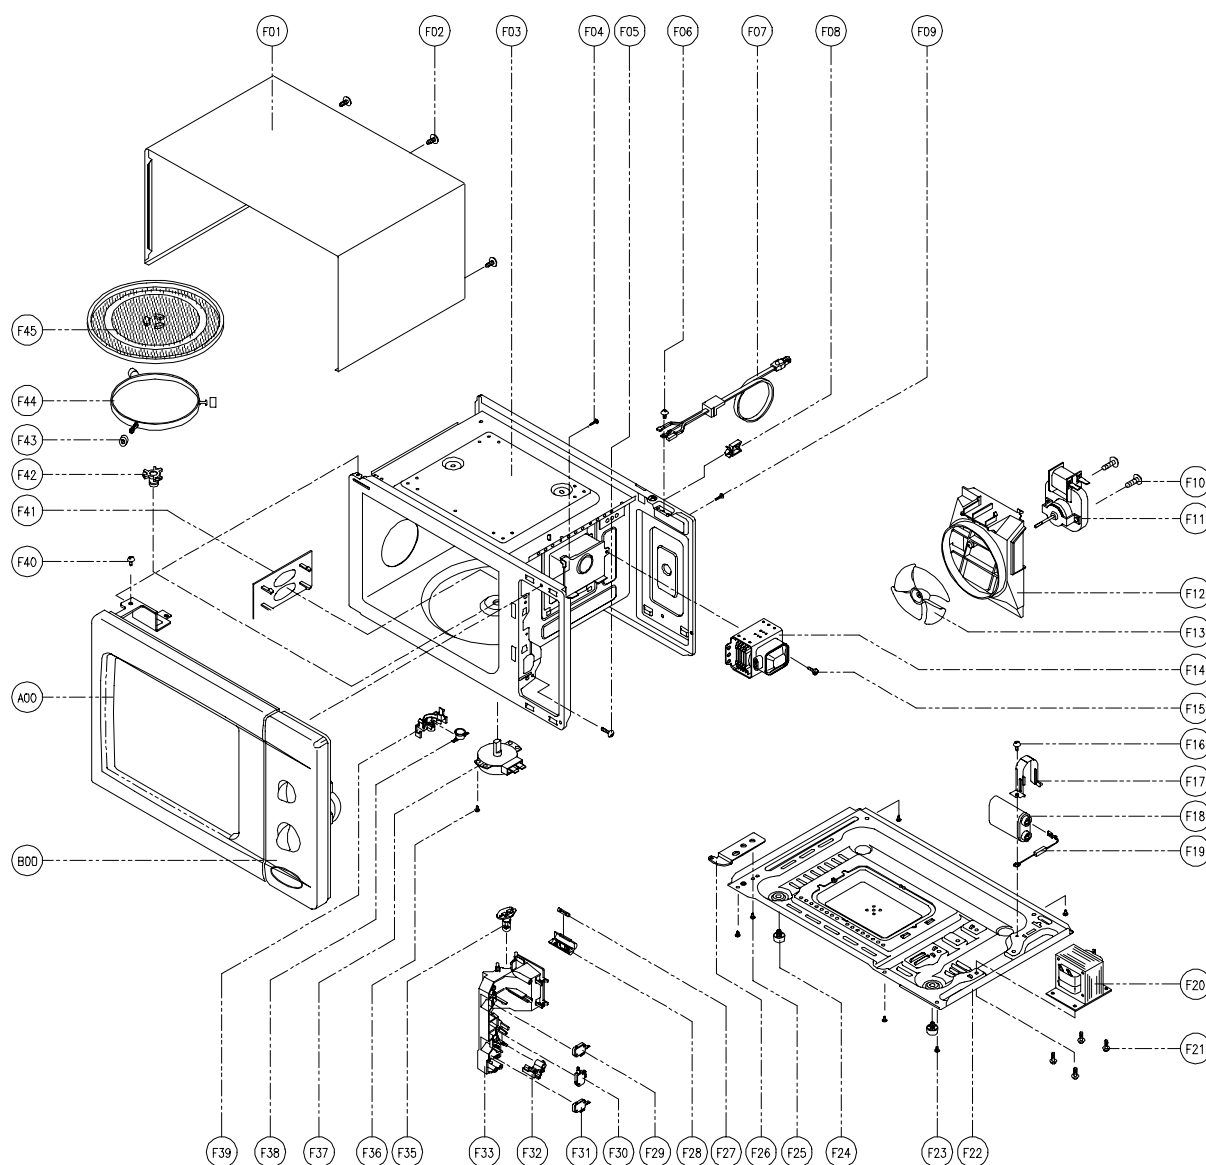

1) KOR-63B50A

NO	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
A00	3511710330	DOOR AS	KOR-63B50S	1	
B00	3516721410	CONTROL-PANEL AS	KOR-63B50A	1	
F01	3510801310	CABINET	PCM T0.36 GE	1	
F02	3516004100	SPECIAL SCREW	T1 TRS LR4 POLE 4*10 MFZN	3	
F03	3516109000	CAVITY WELD AS	CAVITY WELD AS	1	
	3516109600	CAVITY JOINT AS	CAVITY WELD AS	1	
F04	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1	
F05	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1	
F06	7112401011	SCREW TAPPING	T1 TRS 4*10 MFZN	1	
F07	35113NAN0H	CORD POWER AS	3 X 18AWG 60X 60 120-RTML	1	
F08	4413A90012	CLAMP POWER CORD	NYLON66	1	
F09	7122401211	SCREW TAPPING	T2S TRS 4 * 12 MFZN	1	
F10	7121403011	SCREW TAPPING	T2S PAN 4 * 30 MFZN	2	
F11	3963821600	MOTOR SHADED POLE	120V 21W OEM-10DWX1-A07	1	
F12	3512517000	GUIDE WIND	PP	1	
F13	3511800300	FAN	PP+30%GLASS	1	
F14	3518002200	MAGNETRON	2M218H(MF) I	1	
F15	3516004000	SPECIAL SCREW	T2 BOLT FLANGE 5 X 12 DACRO	1	
F16	7S422X4081	SPECIAL SCREW	TT2 TRS 4 X 8 SE MFZN	1	
F17	3513003200	HOLDER HV CAPACITOR	SECC T0.6	1	
F18	3518301600	CAPACITOR HV	2100VAC 0.79 μ F #187	1	
F19	3518400400	DIODE HV	HVR-1X-3AB 12KV #187	1	
F20	3518114400	TRANS HV	JMOT-N80A0-63T	1	
F21	3516003700	SPECIAL SCREW	TT3 HEX 4 X 8 FLG MFZN	4	
F22	3510311700	BASE	SBHG T0.8	1	
F23	7112401011	SCREW TAPPING	T1 TRS 4*10 MFZN	5	
F24	3512100900	FOOT	PP DASF-130	2	
F25	7S422X4081	SPECIAL SCREW	TT2 TRS 4 x 8 SE MFZN	1	
F26	3515201101	STOPPER HINGE *U	SCP-1 T2.5	1	
F27		FUSE	120/250V 15A	1	
F28	4415A17352	HOLDER FUSE	NYLON66	1	
F29	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	1	
F30	4415A66600	SW MICRO	VP-532A-OF/SZM-V16-FA-62	1	

EXPLODED VIEW AND PARTS LIST

NO	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
F31	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	1	
F32	3513702600	LEVER LOCK	POM	1	
F33	3513811700	LOCK	POM	1	
F35	3513601500	LAMP	BL 125V 25W T25 C5A H187	1	
F36	7121400611	SCREW TAPPING	T2S PAN 4 X 6 MFZN	1	
F37	3966820200	MOTOR SYNCRO	120V 2W GM-16-12F17	1	
F38	3518905300	THERMOSTAT	OFF: 75 ON:65 H #187 NB	1	
F39	3513003400	HOLDER THERMOSTAT	PBT	1	
F40	3516003700	SPECIAL SCREW	TT3 HEX 4x8 FLG MFZN	1	
F41	3511406200	COVER WAVE GUIDE	HEATPROOF PP	1	
F42	3517400620	COUPLER	XAREC	1	
F43	3514700710	ROLLER	TEFLON	3	
F44	3512517300	GUIDE ROLLER	PP 5113MF6 A353B	1	
F45	3517203600	TRAY	GLASS	1	