

Service Manual Microwave Oven

Model : KOG-6215(OS)



DAEWOO ELECTRONICS CO., LTD.
OVERSEAS SERVICE DEPT.

DAEWOO

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not operate or allow the oven to be operated with the door open.
- (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: (1) Interlock operation, (2) proper door closing, (3) seal and sealing surfaces (arcing, wear, and other damage), (4) damage to or loosening of hinges and latches, (5) evidence of dropping or abuse.
- (c) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
- (d) Any defective or misadjusted components in the interlock, monitor, door seal and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- (e) A microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.

TABLE OF CONTENTS

PROPER USE AND SERVICE PRECAUTIONS	2
SPECIFICATIONS	4
EXTERNAL VIEWS	4
NAMES AND FUNCTION OF PARTS	5
CONTROL PANEL	6
HOW TO SET THE OVEN CONTROLS	7
INTERLOCK MECHANISM FUNCTIONS AND ADJUSTMENTS	10
PRECAUTIONS FOR DISASSEMBLY AND REPAIR	12
DISASSEMBLY AND ASSEMBLY	13
TROUBLE SHOOTING GUIDE	20
MEASUREMENT	24
COMPONENT TEST PROCEDURE	26
WIRING DIAGRAM	27
EXPLODED VIEW	28

PROPER USE AND SERVICE PRECAUTIONS

CAUTION : This Device is to be Serviced Only by Properly Qualified Service Personnel. Consult the Service Manual for Proper Service Procedures to Assure Continued Safety Operation and for Precautions to be Taken to Avoid Possible Exposure to Excessive Microwave Energy.

1. For Safe Operation

Damage that allows the microwave energy (that cooks or heats the food) to escape will result in poor cooking and may cause serious bodily injury to the operator.

IF ANY OF THE FOLLOWING CONDITIONS EXIST, OPERATOR MUST NOT USE THE APPLIANCE.

(Only a trained service personnel should make repairs.)

- 1) A broken door hinge.
- 2) A broken door viewing screen.
- 3) A broken front panel, oven cavity.
- 4) A loosened door lock.
- 5) A broken door lock.

The door gasket plate and oven cavity surface must be kept clean.

No grease, soil or spatter should be allowed to build up on these surfaces or inside the oven.

DO NOT ATTEMPT TO OPERATE THIS APPLIANCE WITH THE DOOR OPEN. The microwave oven has concealed switches to make sure the power is turned off when the door is opened. Do not attempt to defeat them.

DO NOT ATTEMPT TO SERVICE THIS APPLIANCE UNTIL YOU HAVE READ THIS SERVICE MANUAL.

2. Correct Installation

- 1) This microwave oven weighs 15.5kg(34.1 lbs.) and must be placed on a horizontal base strong enough to support this weight.
- 2) The oven should be placed as far from high temperature source and vapour as possible.
- 3) The power supply cord is about 1.4m (3.3ft) long. Earthing is required when connecting the power source.
- 4) Power consumption of this oven is approximately 1.2 kw. It is suggested that the unit is operated on such power line(about 12.0 amperes) that can provide more power than this rating.
- 5) Object must not be placed on the top enclosure so as not to obstruct air flow for ventilation.

CAUTION

MICROWAVE RADIATION

PERSONNEL SHOULD NOT BE EXPOSED TO THE MICROWAVE ENERGY WHICH MAY RADIATE FROM THE MAGNETRON OR OTHER MICROWAVE GENERATING DEVICE IF IT IS IMPROPERLY USED OR CONNECTED. ALL INPUT AND OUTPUT MICROWAVE CONNECTIONS, WAVEGUIDE, FLANGES AND GASKETS MUST BE SECURE. NEVER OPERATE THE DEVICE WITHOUT A MICROWAVE ENERGY ABSORBING LOAD ATTACHED. NEVER LOOK INTO AN OPEN WAVEGUIDE OR ANTENNA WHILE THE DEVICE IS ENERGIZED

IMPORTANT

The wires in this mains lead coloured in accordance with the following code.

Green-and-yellow	: Earth
Blue	: Neutral
Brown	: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by earth symbol or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.


NOTE : This oven is designed for counter-top use only.

SPECIFICATIONS


Power Supply		230V~, 50Hz, single phase with earthing
Microwave	Power Consumption	1,200 W
	Output Power	850W (IEC 705)
	Frequency	2,450 MHz
Grill power consumption		1,200 W
Combination Heating Power Consumption		2,350 W
Outside Dimensions (W X H X D)		470 X 285 X 385 mm (18.5 X 11.2 X 15.1 in.)
Cavity Dimensions (W X H X D)		295 X 190 X 300 mm (11.6 X 7.4 X 11.8 in.)
Net Weight		Approx. 15.5 kg (34.1 lbs.)
Timer		60 min. Dual
Select Function		Microwave / Grill / Combination Heating
Microwave Power Level		High / MED High / MED / Defrost / Low (850W) (655W) (470W) (280W) (140W)
Combination Heating Level		3-Levles (Grill+M/W 3-Power levels)

* Specifications subject to change without notice.

EXTERNAL VIEWS

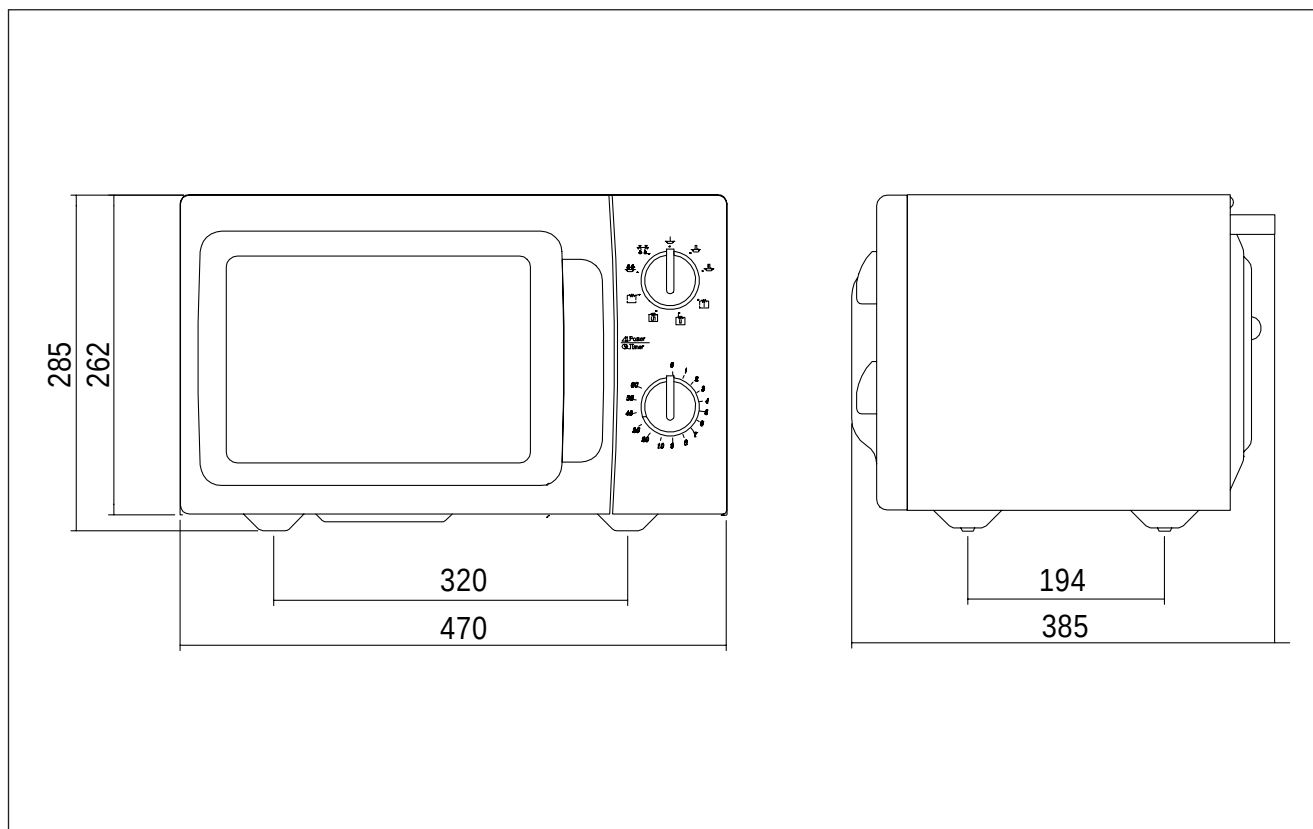

NAMES AND FUNCTION OF PARTS

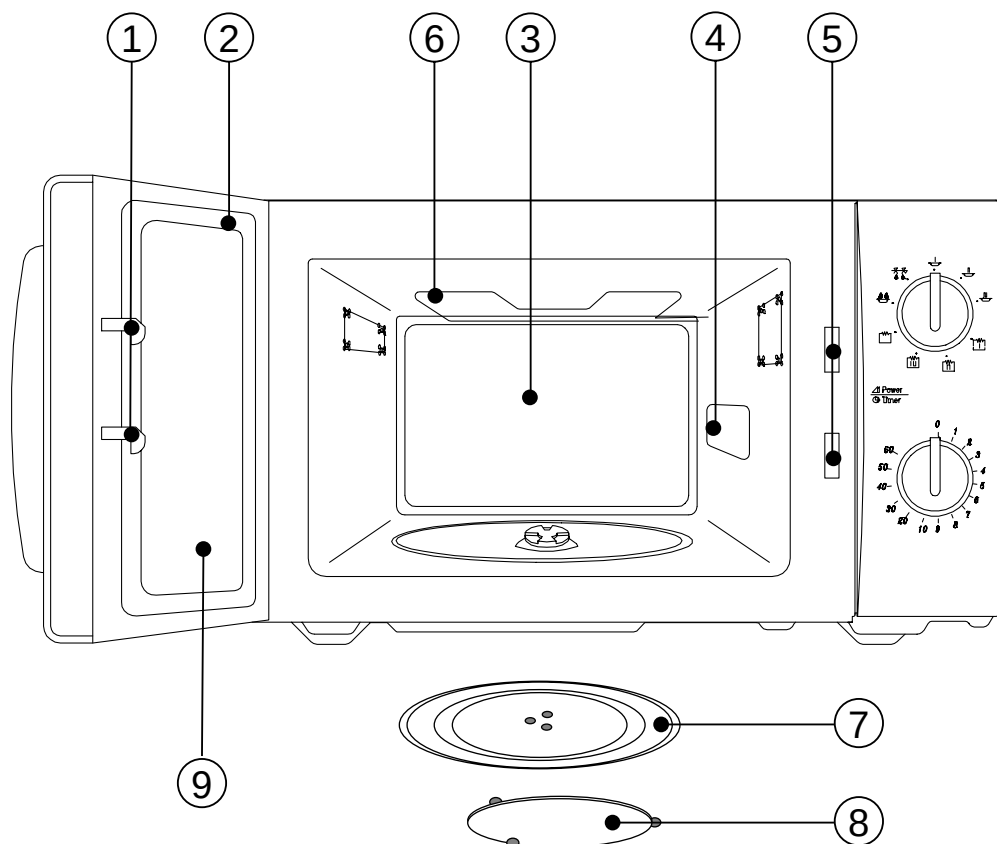

❑ Door latch

When the door is closed it will automatically lock shut. If the door is opened while the oven is operating. The magnetron will automatically shut off.

❑ Door seal

The door seal maintains the microwave within the oven cavity and prevents microwave leakage.

❑ Oven cavity

❑ Spatter shield

Protects the microwave outlet from splashes of cooking foods.

❑ Safety interlock system

Prevents the oven from operating while the door is opened.

❑ Heater

The heater operates you to use Grill or Combi Mode.

❑ Glass cooking tray

Made of special heat resistant glass. The tray must always be in proper position before operating. Do not cook food directly on the tray.


❑ Roller guide

Supports the glass cooking tray.

❑ Door screen

Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves.

CONTROL PANEL

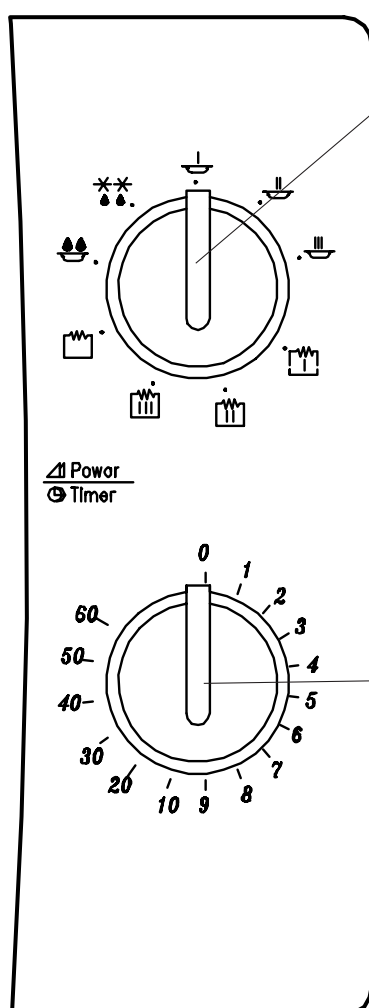

POWER OR FUNCTION SELECT KNOB

- Used to select a microwave power level in M/W, GRILL or SIMUL. cooking.
- Used to select a function before the cooking.
 - 1) M/W OVEN-used to heat food with microwave.
 - 2) GRILL-Used to browning food with grill heater.
 - 3) COMBINATION-used to simultaneous cooking with microwave and grill heater.

TIMER KNOB

- Used in setting cooking time for all functions.

NOTE :

When setting TIMER for less than 1 minute, turn the TIMER past 1 minute and then return to correct timing.



HOW TO SET THE OVEN CONTROLS

- NOTE :**
- i Be sure to read the cookbook's introduction before operating the oven.
 - i Also remember to read this operating instruction for proper safety information and instruction before using the oven.
 - i See the cookbook for specific recipes.
 - i Prior to setting the controls, place one cup of water in the oven, in a heat-proof glass measuring cup, for testing purposes.
 - i You may open the door while the oven is operating.
 - i As soon as the door is opened, the safety mechanisms stop power.
 - i To continue cooking, close door, then the oven is operated.
 - i If you wish to change the time during cooking, simply adjust the TIMER to desired minutes.
 - i When time has elapsed, a bell will ring and the oven will turn off.

1. MICROWAVE DEFROST

- This oven has 5-power levels in microwave cooking.
- You can select these levels by POWER knob.

1. Place food inside oven.
2. Set POWER knob to appropriate M/W power level position.
3. Set TIMER knob to the cooking time.

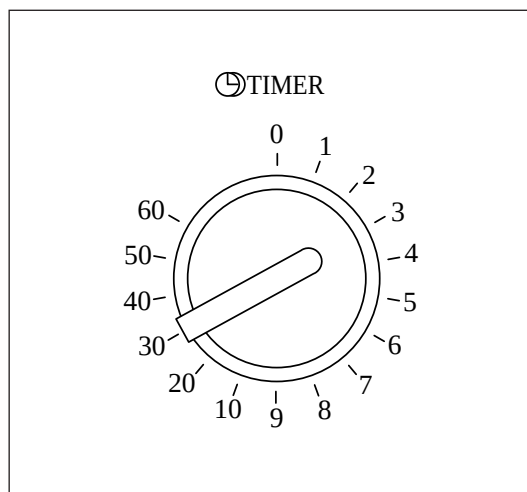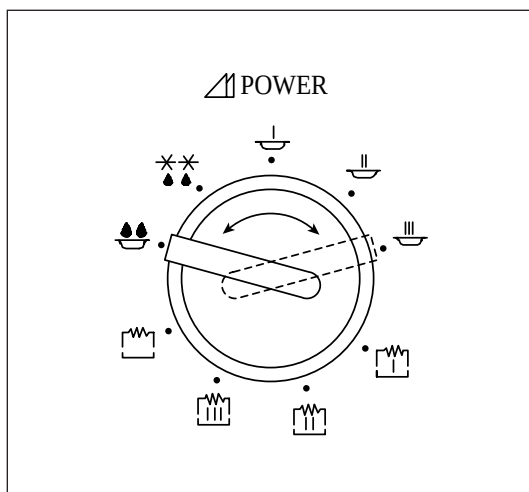

SYMBOL	M/W POWER LEVEL	OUTPUT POWER
	LOW	140W
	DEFROST	280W
	MEDIUM	470W
	MED. HIGH	655W
	HIGH	850W



NOTE : Output power refer to a value of reference.

2. GRILL COOKING


¥ Grilling in this oven is similar to conventional broiling.

¥ There is no need to preheat the oven for grilling.

1. Place food on the Metal Rack, and set it on the Tray.
2. Set POWER knob to GRILL position.
3. Set TIMER knob to the cooking time.

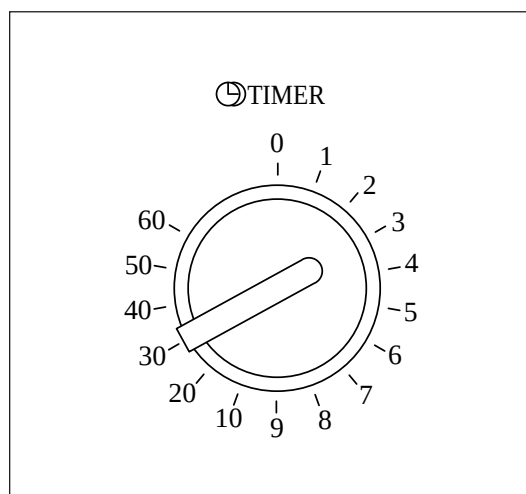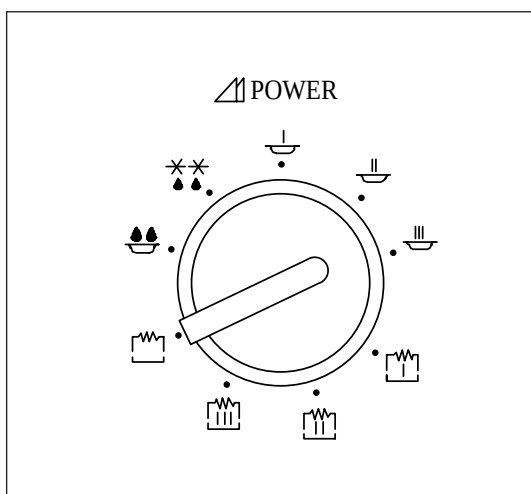

EXAMPLE : To Grill hamburgers, steaks, kabobs, etc. use the trays this way:

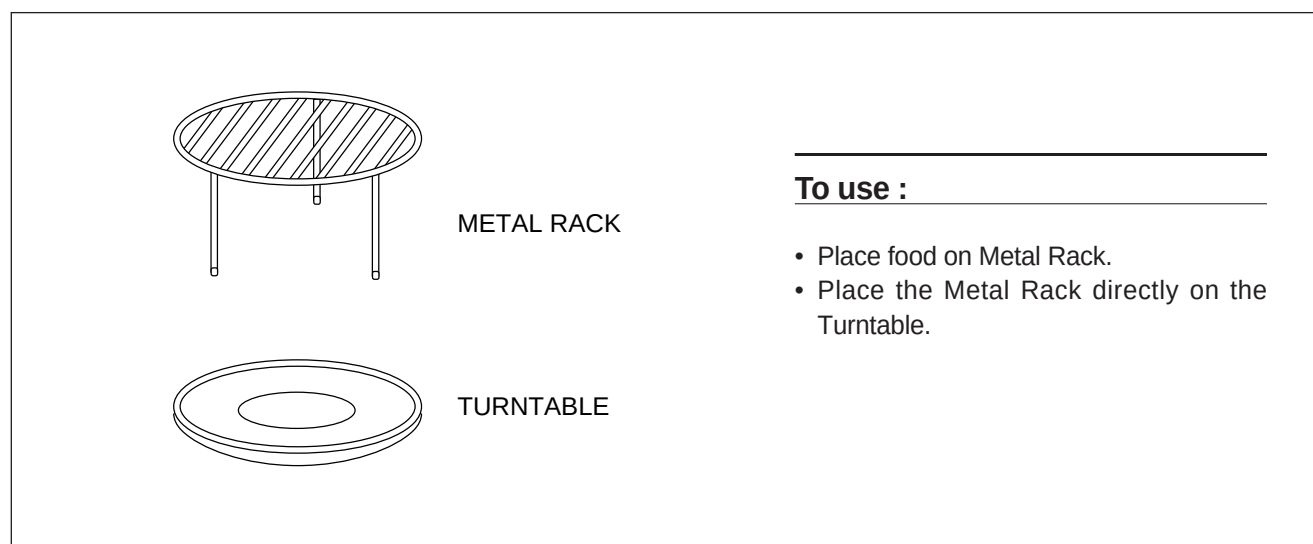



3. COMBINATION COOKING

✧ This oven has 3-cooking levels in COMBINATION-COOKING.

✧ You can select these levels by POWER knob.

 (COMBI 1)	 (COMBI 2)	 (COMBI 3)
Grill + M/W Low	Grill + M/W Med Low	Grill + M/W Med

1. Place food on the Metal Rack or Tray.
2. Set POWER knob to COMBINATION position.
3. Set TIMER knob to the cooking time.

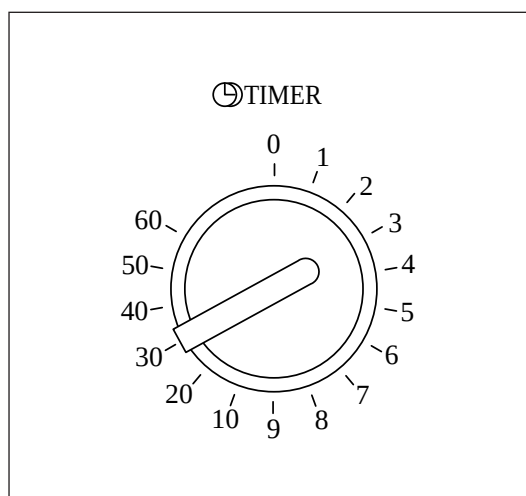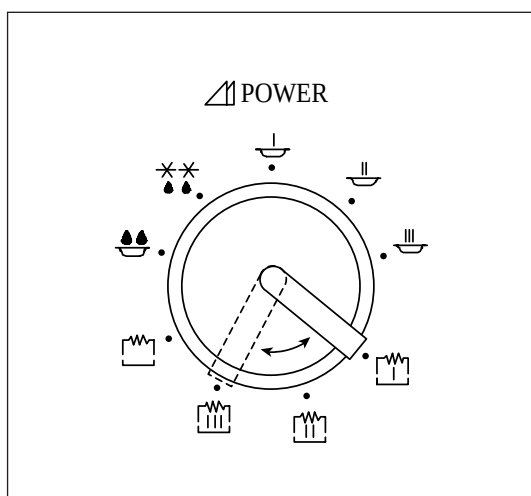

- To prevent the oven operating with the door open, this oven is fitted with safety door interlock switches. If you wish to inspect the food during the cooking time, simply open the door. The oven will automatically stop the cooking.
- To continue cooking, close the door.
- If you wish to stop the cook during the cooking, simply turn the timer knob to the point "OFF". Cooking time can be reset at any time during cycle by turning the timer knob.
- Do not let the timer continue to operate after removing food.
- Never touch the oven window and metal interior of the oven when taking food in and out. The temperature inside the oven and door is quite high.
- When using these modes, be careful as the trays will be hot to touch, use oven mitts or pot holders while handling trays.

GENERAL COOKING HINTS

1. When cook a roast with an excess amount of drippings, it is helpful to remove the drippings at turnover time to prevent spattering.
2. Prick the meats, fish or poultry with a fork to prevent bursting. Steam builds up pressure in meats, fish or poultry which are tightly covered by a skin or membrane.
3. Reduce suggested cooking times. It is always better to undercook foods rather than to overcook them. If a range of times is stated in a recipe, cook the minimum suggested time, check for doneness, and then cook slightly longer if necessary.

INTERLOCK MECHANISM FUNCTIONS AND ADJUSTMENTS

The door lock mechanism is a device which has been specially designed to completely eliminate microwave radiation when the door is opened during operation, and thus to perfectly prevent the danger resulting from the leakage of microwave.


(1) Primary interlock switch

When the door is closed, the hook locks the oven door.

If the door is not closed properly, the oven will not operate.


When the door is closed, the hook pushes the lever downward.

The lever press the button of the primary interlock switch to bring it under 'ON' condition.

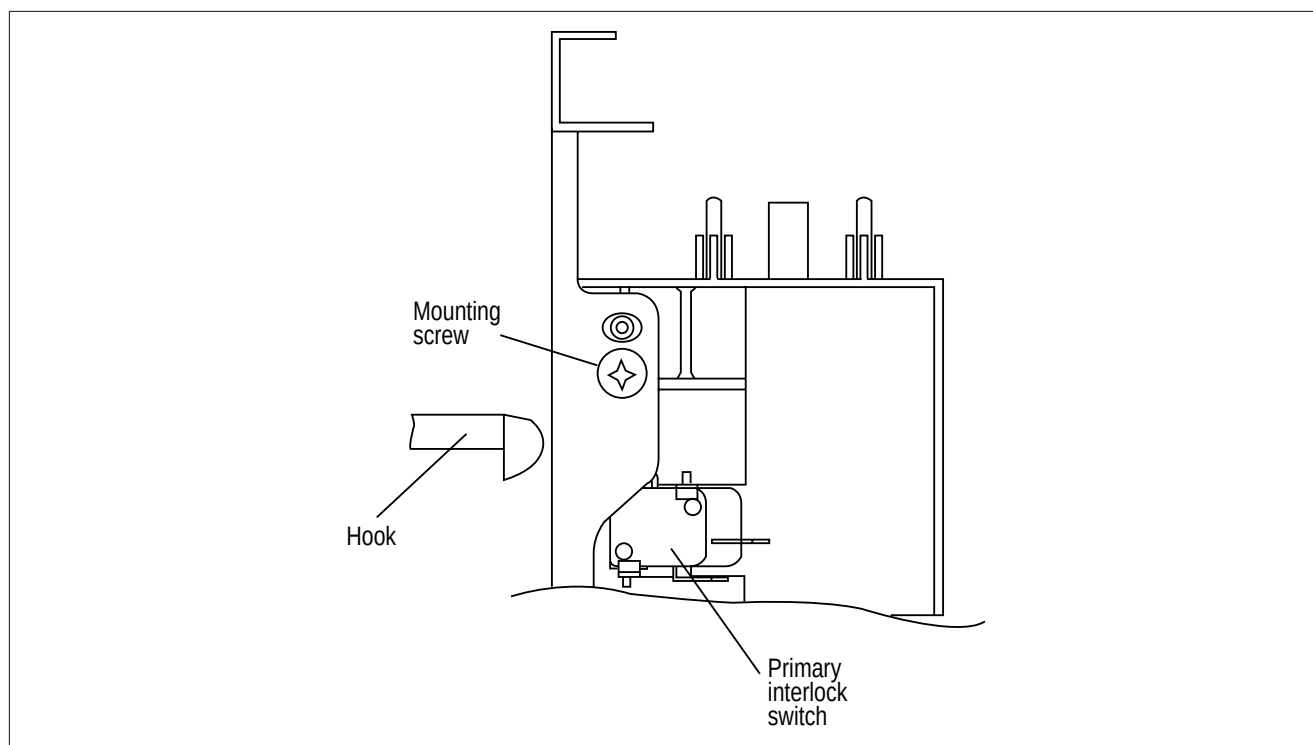

(2) Monitor interlock switch

When the door is closed, the hook pushes the lever forward, and pushes the Latch Lever downward the lever press the button of the interlock monitor switch to bring it under 'OFF' condition. The latch Lever press the button on the secondary interlock switch to bring it under 'ON' condition.

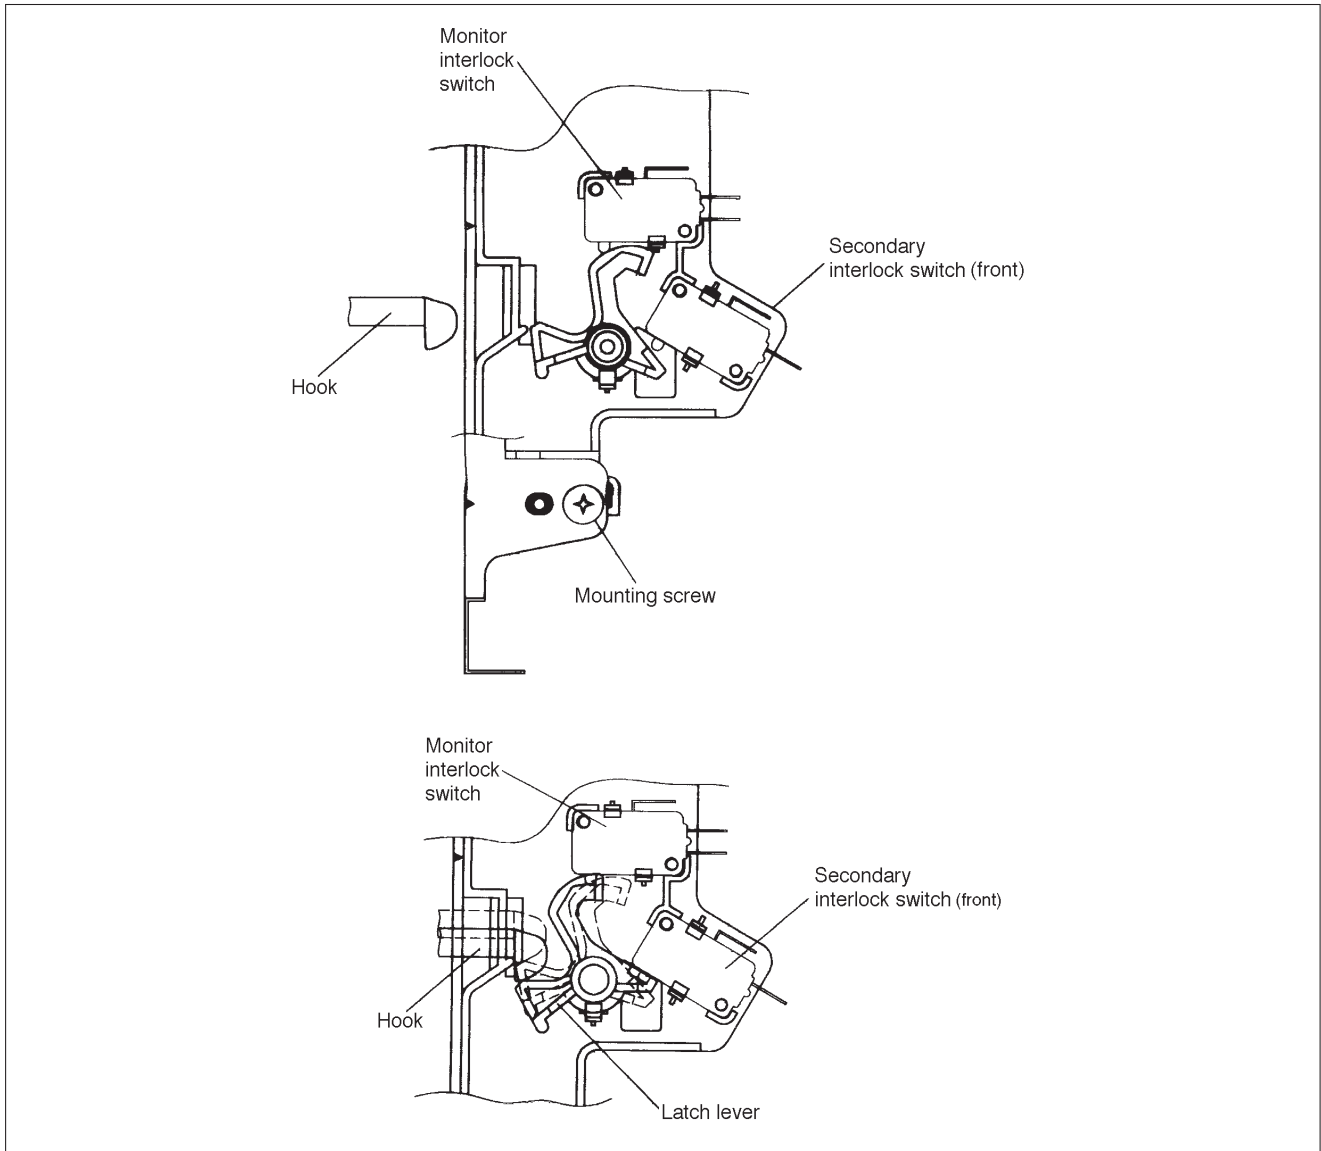

- Adjustment

Interlock monitor switch

When the door is closed, the monitor switch should be opened before other switches close.
When the door is opened, the monitor switch should be closed after other switches open.

Adjustment steps :

- Loosen the two mounting screws.
- Adjust the interlock switch assembly position.
- Make sure that the latch lever moves smoothly after adjustment is completed.
- Completely tighten the two mounting screws.

PRECAUTIONS FOR DISASSEMBLY AND REPAIR

– Cautions to be observed when trouble shooting.

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. It is completely safe during normal operation. However, carelessness in servicing the oven can result in an electric shock or possible danger from a short circuit.

You are asked to observe the following precautions carefully.

- (1) Always remove the power plug from the outlet before servicing.
- (2) Use an insulated screwdriver and wear rubber gloves when servicing the high voltage side.
- (3) Warning about the electric charge in the high voltage capacitor. When inspecting and repairing the high voltage side, always short the capacitor terminals and make sure of discharge.

1. Check the earthing.


Do not operate on a 2-wire extension cord.

The microwave oven is designed to be used when earthed.

It is imperative, therefore, to make sure it is earthed properly before beginning repair work.

2. Warning about the electric charge in the high voltage capacitor.

For about 30 seconds after the operation stops, electric charge remains in the high voltage capacitor. When replacing or checking parts, short between oven chassis and the negative high terminal of the high voltage capacitor, by using a properly insulated screw driver to discharge.

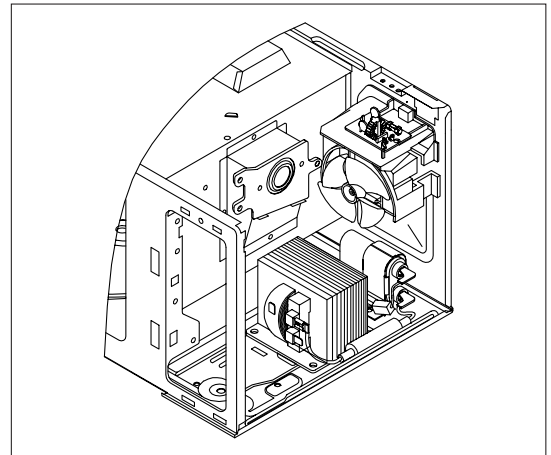

- (4) When the 15 Amp fuse (normal blow type) is blown out due to the operation of the monitor switch; replace primary, secondary interlock switch and monitor switch. Refer to 11 page for the necessary adjustment.
- (5) After repair or replacement of parts, make sure that the screws are properly tightened and all electrical connections are tightened.
- (6) Do not operate without cabinet.


CAUTION : Service personnel should remove their watches whenever working close to or repairing the magnetron.

WARNING : When servicing the appliance, need a care of touching or replacing high potential parts because of electrical shock or exposing microwave. These parts are as follows - H.V. Transformer, magnetron, H.V. Diode, H.V. Capacitor.

DISASSEMBLY AND ASSEMBLY


1. To remove cabinet. (Refer to Fig. 1)

- 1) Remove three screws on cabinet back.
- 2) Push the cabinet backward.

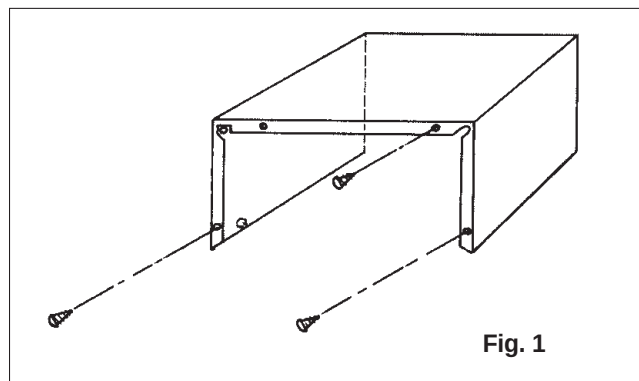


2. To remove guide wind assembly. (Refer to Fig. 2)

- 1) Remove two screws 1 .
- 2) Remove one screw 2 on the rear plate *0.
- 3) Release guide wind 3.
- 4) Pull the fan 5 to the motor shaft.
- 5) Remove two screws 4 which secure the motor shaded pole 6 .
- 6) Reverses the above steps for reassembly.

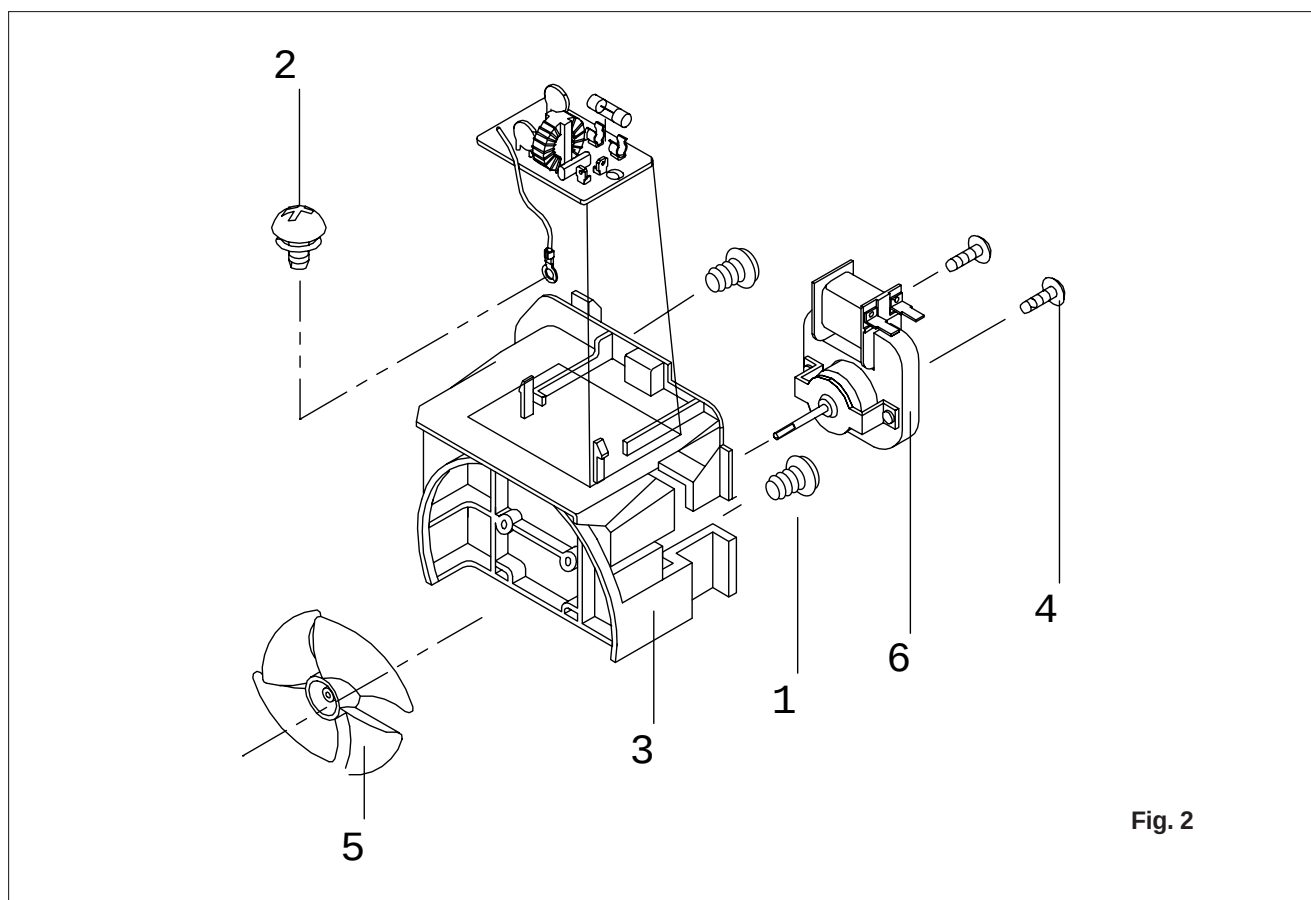


3. To remove H.V. transformer. (Refer to Fig. 3)

- 1) Remove four screws 1 which secure the H.V. Transformer bracket to the base plate.
- 2) Remove the H.V. Transformer 2.

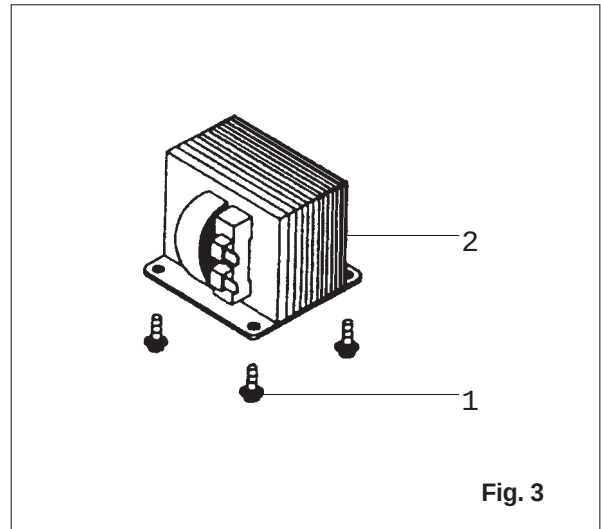


High voltage circuit wiring


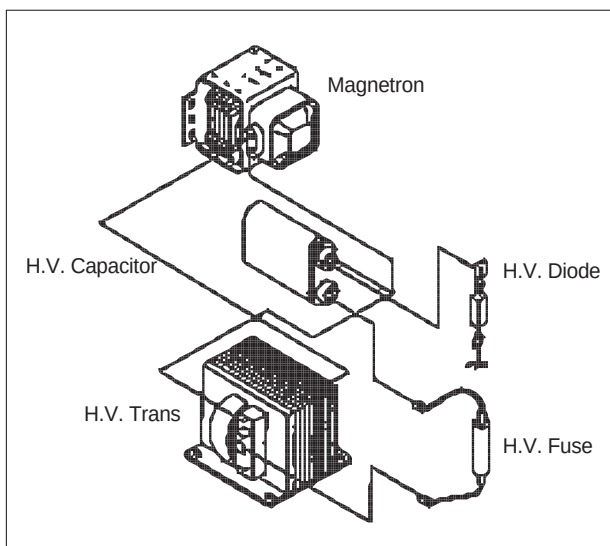


4. To remove magnetron. (Refer to Fig. 4)

- 1) Remove three screws 2 which secure the magnetron 1.
- 2) Remove the magnetron.
- 3) Reverse the above steps for reassembly.

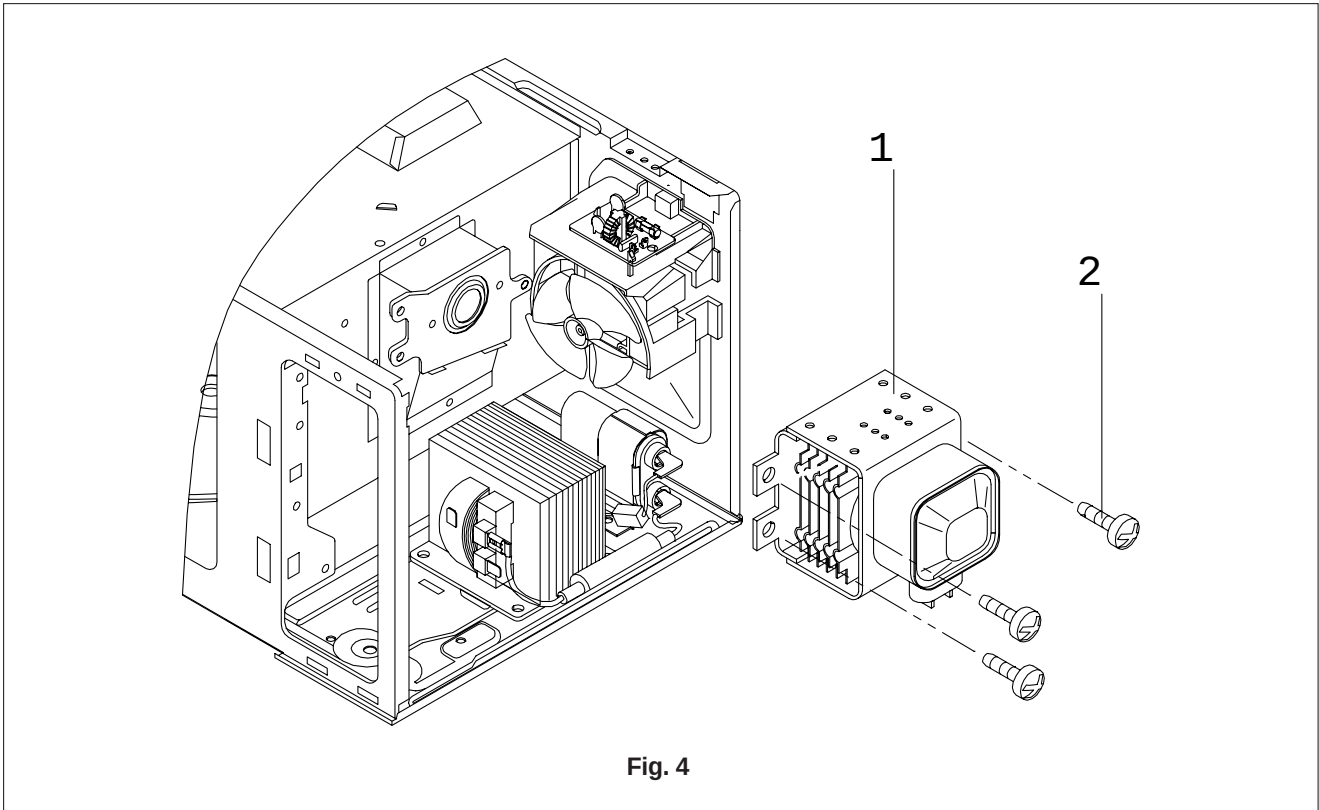

CAUTION : Never install the magnetron without the metallic gasket plate which is packed with each magnetron to prevent microwave leakage. Whenever repair work is carried out on magnetron, check the microwave leakage. It shall not exceed $4\text{mW}/\text{cm}^2$ for a fully assembled oven with door normally closed.

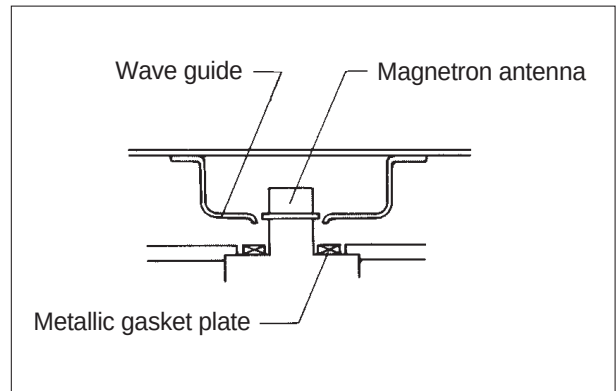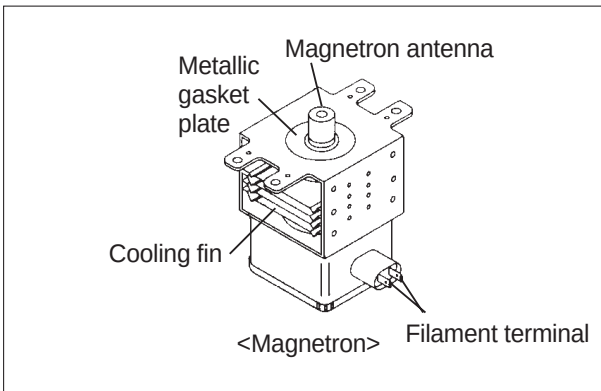

5. To remove parts of control panel assembly (Refer to Fig. 5, 6)

- 1) Remove a screw holding control panel assembly to the oven front plate.
At the same time, draw forward the control panel assembly from oven front plate.
- 2) Remove two screws ⑩ which secure the timer assembly 9 .
- 3) Remove the timer assmebly 9 .
- 4) Pull out the knob 3 from the timer assembly 9 .
- 5) Pull out the coupler timer 8 from the timer assembly 9 .
- 6) Pull out the SW MICRO q from the control panel 1 .
- 7) Remove a screw 7 which secure the coupler VPC knob 6 .
- 8) Pull out the coupler VPC knob 6 and knob VPC 2 from the control panel 1 .
- 9) Remove the spring flat 5 .
- 10) Pull out the SW MICRO 4 from the control panel 1 .
- 11) Reverse the above steps for reassembly.


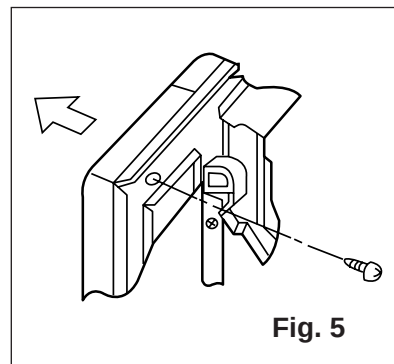


Fig. 5

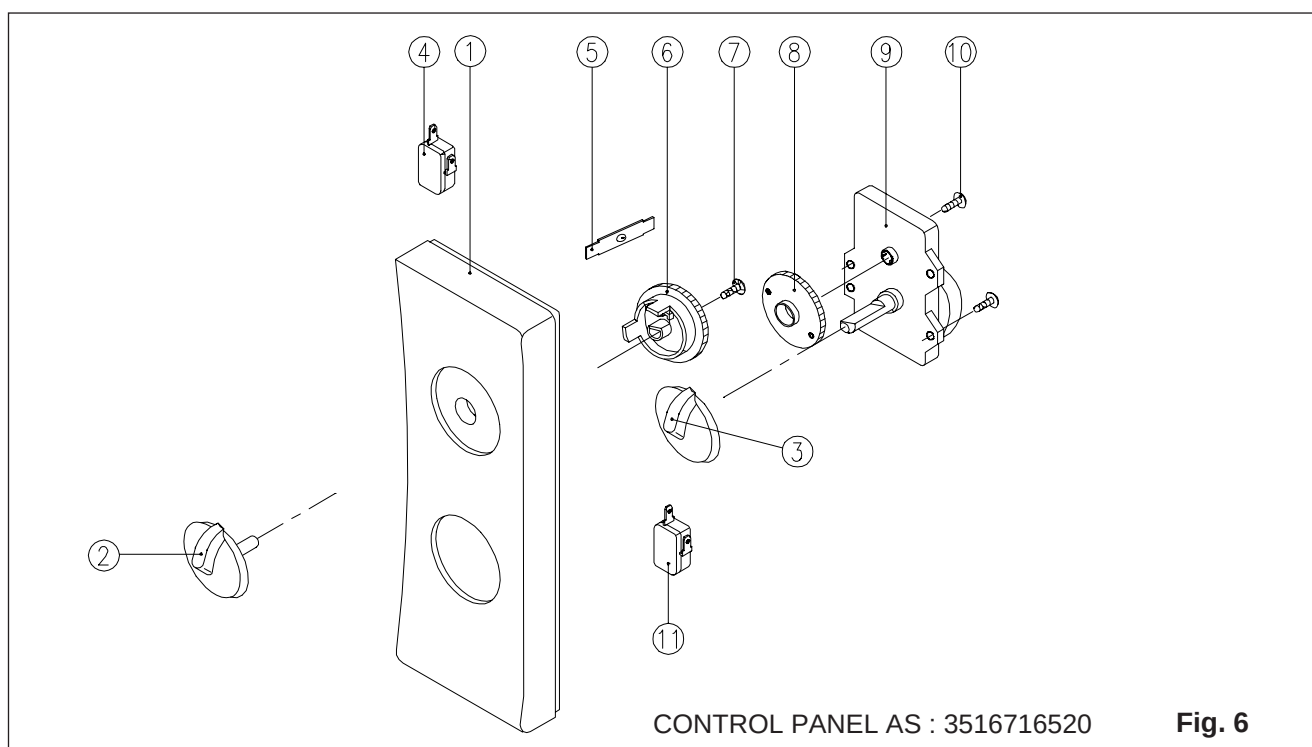

CONTROL PANEL AS : 3516716520

Fig. 6

REF.NO.	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
1	3516715820	C-PANEL	ABS XR-401	1	
2	1513404800	KNOB VPC	ABS XR-401	1	
3	1513404700	KNOB	ABS XR-401	1	
4	4415A66600	SW MICRO	VP-532A-OF SPNC #187	1	
5	3515101600	SPRING FLAT	SUS301 T0.5	1	
6	3517401200	COUPLER VPC KNOB	POM	1	
7	7S341W40B1	SCREW TAPPING	T2S PAN 4X12 PW MFZN	1	
8	3517401100	COUPLER TIMER	POM	1	
9	3518204900	TIMER	KN60MKD11E-P	1	
10	7S341W40B1	SCREW TAPPING	T2S PAN 4X12 PW MFZN	2	
11	4415A17352	SW MICRO	VP-533A-OF SPNO #187	1	

6. To remove door assembly. (Refer to Fig. 7)

- 1) Remove two screws 1 which secure to hinge.
- 2) Remove door assembly 2 .
- 3) Remove door above for reassembly taking case to replace fixing glue.

7. To remove door part. (Refer to Fig. 8)

- (1) Remove the Gasket door 5 .
- (2) Remove the Frame Door 1.
- (3) Remove the Hook 6 and Spring 7.
- (4) Remove Barrier Screen 2.

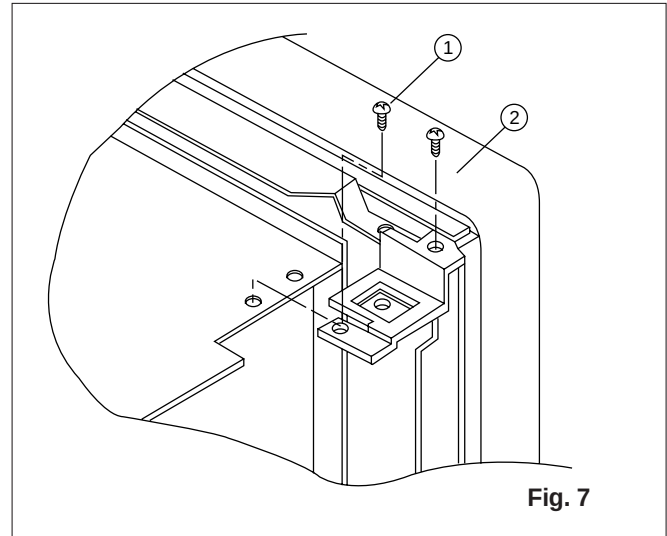


Fig. 7


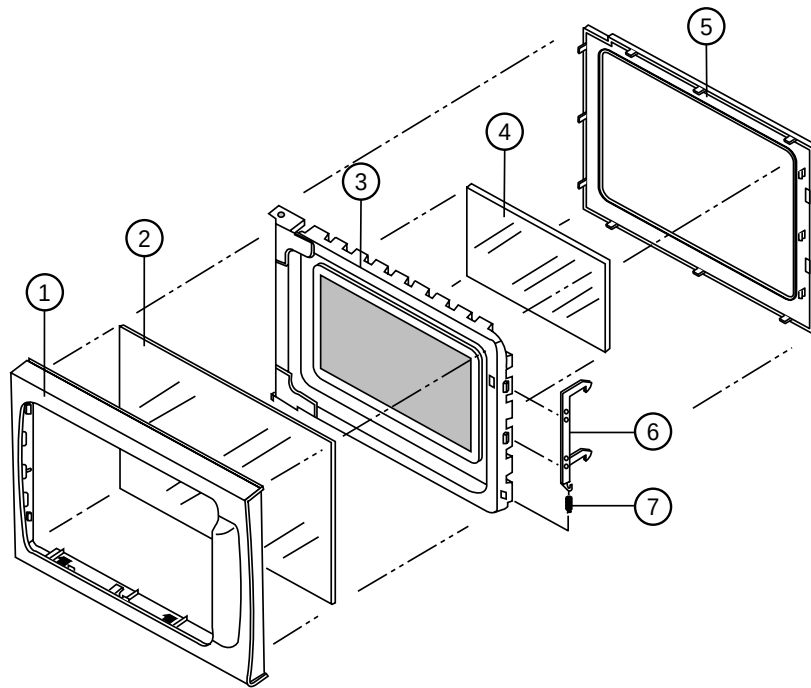


Fig. 8

REF NO.	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
1	3512203400	FRAME DOOR	ABS XR-401	1	
2	3517004800	BARRIER-SCREEN*O	GLASS 3.2T	1	
3	3516715800	DOOR PAINTING AS	KOG-6215	1	
4	3517004700	BARRIER-SCREEN*I	GLASS 3.0T	1	
5	3512301100	GASKET DOOR	PBT	1	
6	3513101000	HOOK	POM	1	
7	3515101700	SPRING HOOK	PW1	1	

8. Method to reduce the gap between the door seal and the oven front surface.

- (1) To reduce gap located on part 'A'.
 - 1) Remove the cabinet.
 - 2) Loosen a screw on top door hinge, then push the door to contact the door seal to oven front surface.
 - 3) Tighten a screw.

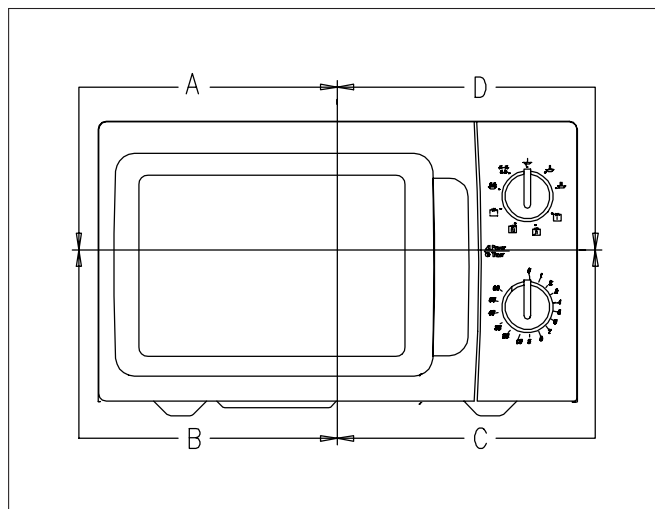

- (2) To reduce gap located on part 'B'.
 - 1) Loosen a screw on bottom hinge, then push the door to contact the door seal to oven front surface.
 - 2) Tighten a screw.
- (3) To reduce gap located on part 'C'.
 - 1) Remove the cabinet.
 - 2) Loosen a screw on interlock switch assembly located bottom of oven body.
 - 3) Draw the interlock switch assembly inward as possible to engage with hook on the door bottom.
 - 4) Tighten a screw.
- (4) To reduce gap located on part 'D'.
 - 1) Remove the cabinet.
 - 2) Loosen a screw on interlock switch assembly located top of oven body.
 - 3) and 4) are same as step (3).

NOTE : Small gap may be acceptable if the microwave leakage does not exceed $1\text{mW}/\text{cm}^2$.

NOTE : The door on a microwave oven is designed to act as an electronic seal preventing the leakage of microwave energy from the oven cavity during the cook cycle. This function does not require that the door be air-tight, moisture (condensation) - Tight or light-tight. Therefore, the occasional appearance of moisture, light or the sensing of gentle warm air movement around the oven door is not abnormal and do not of themselves, indicate a leakage of microwave energy from the oven cavity. If such were the case, your oven could not be equipped with a vent, the very purpose of which is to exhaust the vapor-laden air from the oven cavity.

9. To remove tray motor and under Heater. (Refer to Fig. 9)

- 1) Cut the tray motor cover parts from the base plate (Refer to Fig. 9).
- 2) Remove two screws 2 which secure the tray motor 1.

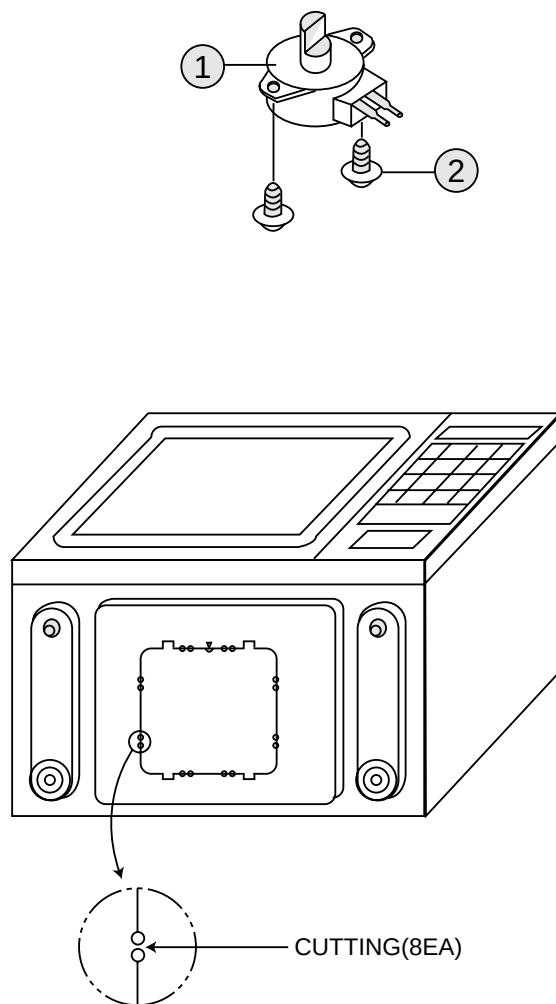


Fig. 9

10. To remove grill heater assembly (Refer to Fig. 10)

- 1) Release two hex nuts 0 holding the Grill Heater Assembly 9 to top and side plate.
- 2) Remove Grill heater Assembly.

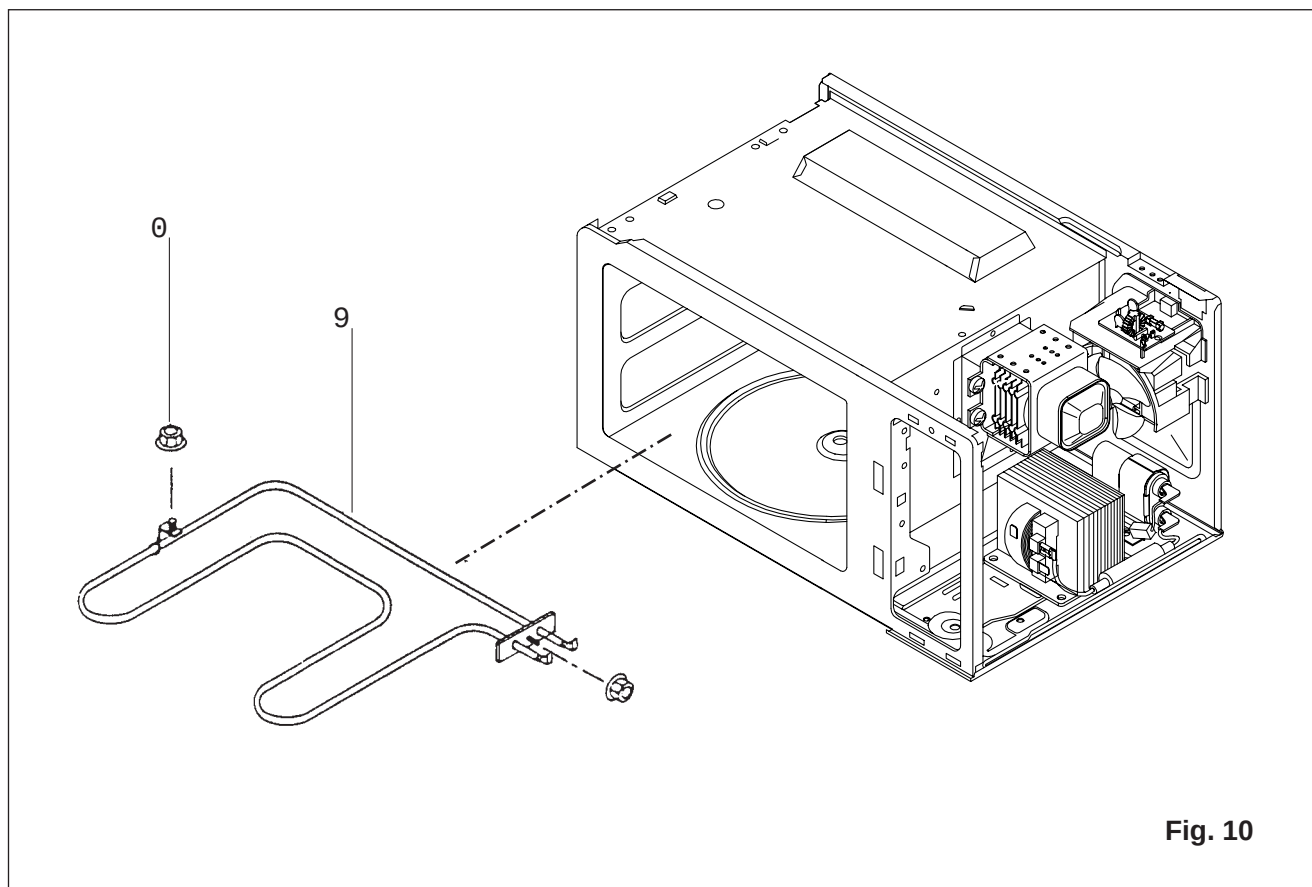


Fig. 10

TROUBLE SHOOTING GUIDE

Following the procedure below to check if the oven is defective or not.

1. Check earthing before fault finding.
2. Be careful of the high voltage circuit.
3. Discharge the high voltage capacitor.
4. When checking the continuity of the switches, fuse or high voltage transformer, disconnect one lead wire from these parts and check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.

NOTE : When electric parts are checked or replaced, be sure the power cord is not inserted the wall outlet. Check wire harness, wiring, and connection of the terminals, and power cord before check the parts listed below.

(TROUBLE 1) Oven does not operate at all; any inputs can not be accepted

Condition	Check	Result	Cause	Remedy
Fuse blows	Check continuity of interlock monitor switch with door closed (COM ; ÆNC)	(COM ; ÆNC) Continuity	Malfunction of interlock monitor switch	Replace Note 1.
		No Continuity		
	Check continuity of both primary and secondary interlock switch with door closed	No Continuity	Malfunction of interlock switch	Replace Note 1.
		Continuity		
	Check continuity of primary interlock switch contact with door partially open until interlock monitor switch contact close (COM ; ÆNC close)	Continuity	Shorted contacts of primary interlock switch	Replace Note 1.
Outlet has proper voltage. Fuse does not blow	Check continuity both magnetron and heater thermostat	No Continuity	Defective magnetron and heater thermostat	Replace
	check continuity of noise filter board	No Continuity	Defective line filter board	Replace
	Check continuity of power supply cord	No Continuity	Open power supply cord	Replace

NOTE 1 : All these switches must be replaced at the same time, please refer to page 11 and 12 for adjustment instructions.

(TROUBLE 2) Heater does not heat (Food will not become hot).

Condition	Check	Result	Cause	Remedy
Grill heater does not heat	Check continuity of primary interlock switch	No Continuity	Malfunction of primary interlock switch	Adjust or replace
	Check continuity of heater select switch and timer switch	No Continuity	Defective timer ass'y	Replace the timer ass'y
	Check continuity of heater thermostat	No Continuity	Defective heater thermostat	Replace the heater thermostat
	Check continuity of secondary interlock switch	No continuity	Malfunction of secondary interlock switch	Adjust or replace
	Check continuity of heater	No continuity	Defective heater	Replace the heater

(TROUBLE 3) No microwave oscillation even though fan motor rotates.

Condition	Check	Result	Cause	Remedy
No microwave oscillation	Check continuity of high voltage fuse	No Continuity		
	Replace high voltage fuse			
	Check continuity of high voltage capacitor terminals with wires removed	Continuity	Defective high voltage transformer	Replace
	Check continuity of high voltage rectifier in forward and backward direction with DC megger	Continuity in backward direction	Defective high voltage rectifier	Replace
	Connect megger leads to magnetron terminal and magnetron body	Continuity	Defective magnetron	Replace
	Check resistance of primary and secondary coil of high voltage transformer	0 Ω or ∞	Defective high voltage transformer	Replace
	Check continuity of magnetron heater with wires removed	No Continuity	Defective magnetron	Replace
	Check continuity of filament terminal of high voltage transformer	No Continuity	Defective high voltage transformer	Replace
	Check continuity of microwave select switch	No Continuity	Defective timer ass'y	Replace

MEASUREMENT

1. Microwave Output Power

1-1. Standard Method


Microwave output power can be checked by indirectly measuring the temperature rise of a certain amount of water exposed to the microwave as directed below.

- 1) Microwave power output measurement is made with the microwave oven supplied at rated voltage and operated at its maximum microwave power setting with a load of 1,000 ± 5cc of potable water.
- 2) The water is contained in a cylindrical borosilicate glass vessel having a maximum material thickness of 3 mm and an outside diameter of approximately 190 mm.
- 3) The oven and the empty vessel are at ambient temperature prior to the start of the test. The initial temperature of the water is 10 ± 2°C (50 ± 3.6°F). It is measured immediately before the water is added to the vessel. After addition of the water to the vessel, the load is immediately placed on the center of the shelf which is in the lowest normal position. (Fig. 11).
- 4) Microwave power is switched on.
- 5) Heating time should be exactly 49 seconds. Heating time is measured while the microwave generator is operating at full power. The filament heat-up time magnetrons is not included.
- 6) The initial and final water temperatures are selected so that the maximum difference between the ambient and final water temperatures is 5K.
- 7) The microwave power output P in watts is calculated from the following formula:

$$P = 4.187 \pm Mw(T_2 - T_1) + 0.88 \pm Mc(T_2 - T_0)$$

- Mw is actual mass of water.
- Mc is mass of the container.
- T₀ is the initial temperature of the container.
- T₁ is the initial water temperature.
- T₂ is the final water temperature.

The power measured should be 850W ± 10 %.

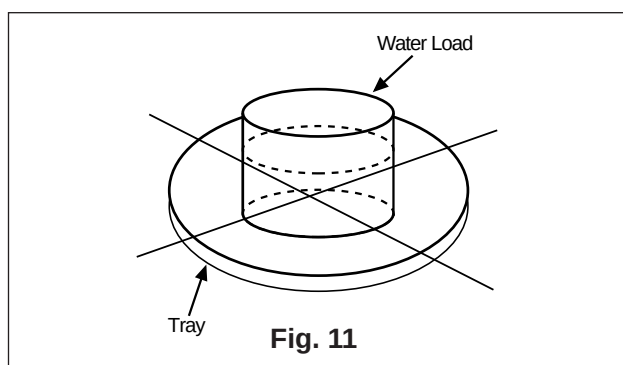

CAUTION :

1. Water load should be measured exactly to 1 litre.
2. Input power voltage should be exactly volts as specified.
3. Ambient temperature should be 20 ± 2°C

2. Electrical Continuity Check of Interlock Switch

2-1. Procedure

NOTE : Remove the power plug from the wall receptacle before testing.

1. Primary Interlock Switch

- 1) Disconnect two connectors from Primary Interlock Switch.
- 2) Connect the ohmmeter leads between the terminals of the primary interlock switch.
- 3) Read the value of resistance between the terminals of the switch, when the door is opened, and when the door is closed.

2. Secondary Interlock Switch

- 1) Disconnect two connectors from secondary interlock switch.
- 2) Connect the ohmmeter leads between the terminals of the secondary interlock switch.
- 3) Read the value of resistance between the terminals of the switch, when the door is opened, and when then oven door is closed.

3. Interlock Monitor Switch

- 1) Disconnect the lead wire connecting the primary interlock switch and interlock monitor switch from primary interlock switch terminal.
- 2) Connect the ohmmeter leads between the lead wire connector disconnected as item '1' and the power supply neutral plug pin.
- 3) Read the value of resistance between the lead wire connector and the power supply neutral plug pin, when the oven door is opened, and when the oven door is closed.

2-2 Judgement

The value of resistance should be applied to the value specified below.

Door	Open	Closed
Primary Interlock Switch	∞	0
Secondary Interlock Switch	∞	0
Interlock Monitor Circuit	0	∞

When value obtained is not acceptable, the switch should be replaced or adjusted again.

3. Microwave Leakage Test

3-1. Warning

- 1) DO NOT place your hands into any suspected microwave leakage field unless the safe density level is known.
- 2) Always start measuring of an unknown field to assure safety for operating personnel from microwave energy.
- 3) Slowly approach the unit under test until the radiometer reads an appreciable leakage from the unit under test.
- 4) Care should be taken not to place the eyes in direct line with the source of microwave energy.

3-2 Method

The power density of the microwave leakage emitted by the microwave oven should not exceed $1\text{mW}/\text{cm}^2$ at any point 50mm (2 in.) or more away from the external surface of the oven as measured prior to acquisition by a purchaser and thereafter once the oven is in use, $4\text{mW}/\text{cm}^2$ at any point 50mm(2 in.) or more away from the external surface of the oven, checks to be made around the whole of the door seal and on each of the main unit surface.

Measurements should be made with the oven operating at its maximum output and containing a load of 275 ± 15 millilitres of tap water initially at 68 ± 9 °E (20 ± 5 °C) placed within the cavity at the center of the load carrying surface provided by the manufacture. The water container should be a low form 600 milliliters beaker having an inside diameter of approximately 85mm (3-11/32 in.) and made of an electrically nonconductive material such as glass or plastic.

3-3. Procedures

- 1) Prepare 600cc glass or plastic container.
- 2) Pour 275 ± 5 millilitres of tap water initially at 68 ± 9 °E (20 ± 5 °C) in the container.
- 3) Place it at the centre of the tray.
- 4) Operate oven.
- 5) measure the microwave leakage using an approved microwave leakage meter after a few minutes of operation.

NOTE : The scan rate should not exceed 1 inch/sec.

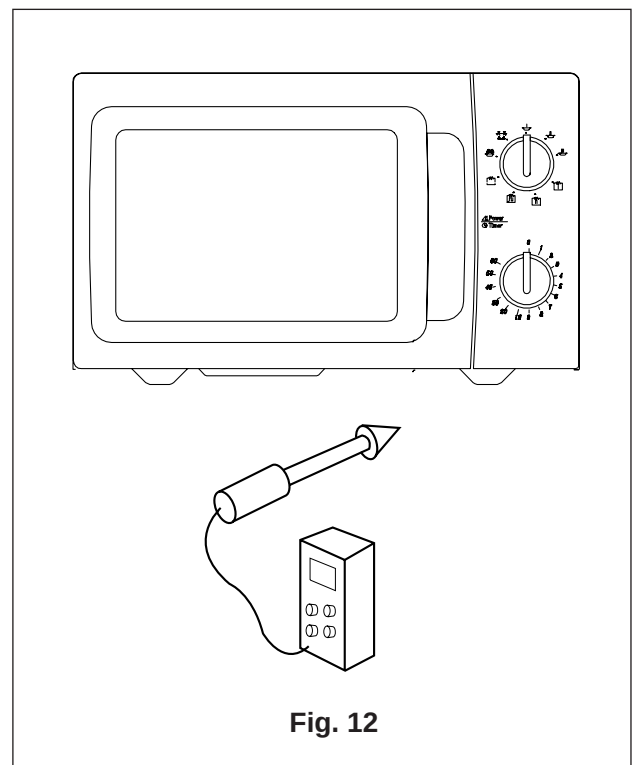


Fig. 12


COMPONENT TEST PROCEDURE

1. High voltage is present at the high voltage terminal of the high voltage transformer during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the capacitor (see page 13).

1. High voltage transformer

- (A) Remove connections from the transformer terminals and check continuity.
- (B) Normal readings should be as follows:

Secondary winding	Approx. 110.0Ω ± 10%
Filament winding	Approx. 0Ω
Primary winding	Approx. 0Ω

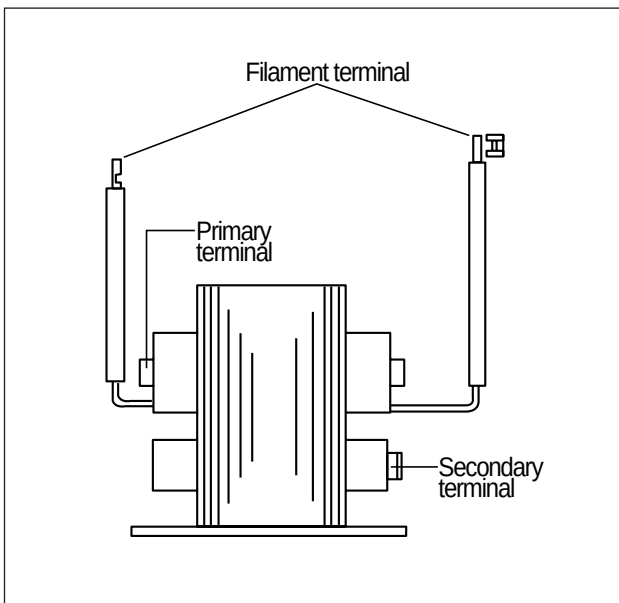

2. High voltage capacitor

- (A) Check continuity of capacitor with meter on the highest OHM scale.
- (B) A normal capacitor will show continuity for a short time, and then indicate 9MΩ once the capacitor is charged.
- (C) A shorted capacitor will show continuous continuity.
- (D) An open capacitor will show constant 9MΩ.
- (E) Resistance between each terminal and chassis should be infinite.

3. High voltage diode

The high voltage diode is located on the base near the transformer.

- (A) Isolate the diode from the circuit by disconnecting the leads.
- (B) With the ohmmeter set on the highest resistance scale, measure the resistance across the diode terminals.


Reverse the meter leads and again observe the resistance reading. Meter with 6V, 9V or higher voltage batteries should be used to check the front-to-back resistance of the diode, otherwise an infinite resistance may be read in both directions. A normal diodes resistance will be infinite in one direction and several hundred KΩ in the other direction.

4. Magnetron


For complete magnetron diagnosis, refer to "Measurement of the Microwave Output Power".

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

- (A) Isolate magnetron from the circuit by disconnecting the leads.
- (B) A continuity check across magnetron filament terminals should indicate one ohm or less.
- (C) A continuity check between each filament terminal and magnetron case should read open.

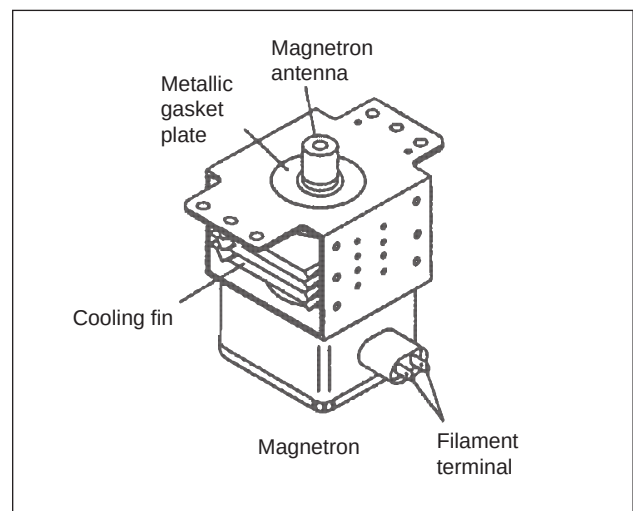

WIRING DIAGRAM

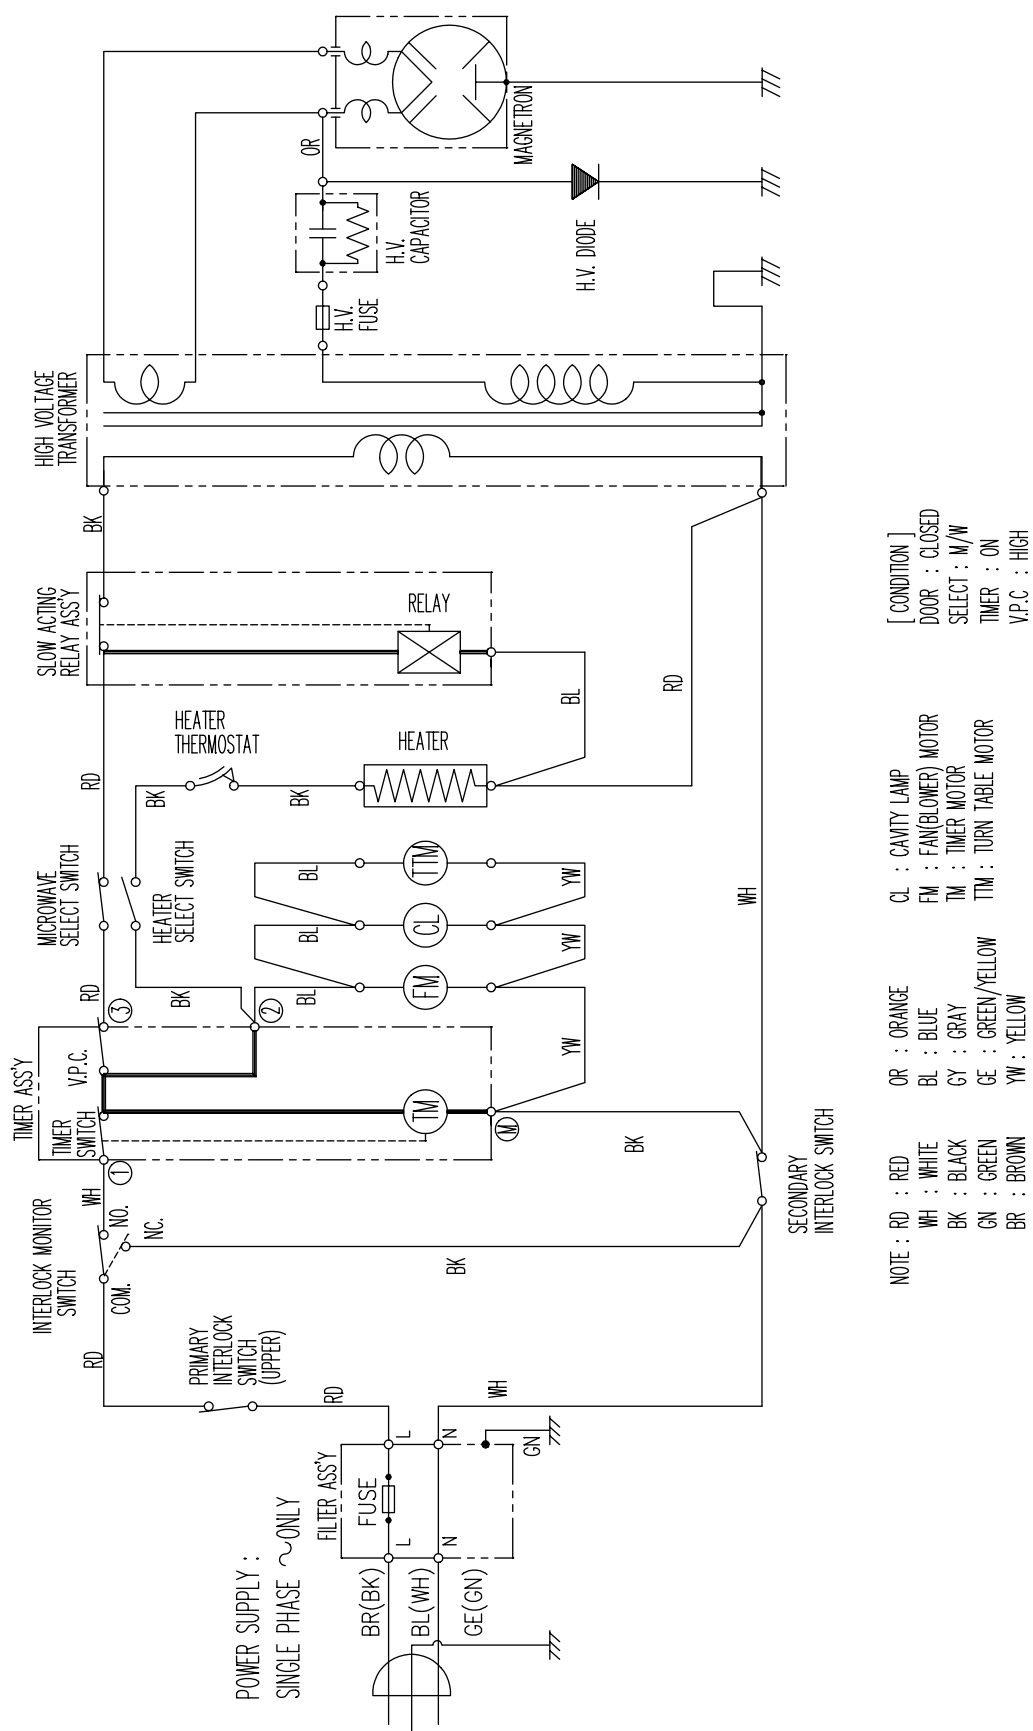

EXPLODED VIEW

NO	품명	SPEC	품명 코드	수량
A00	DOOR AS	KOC-621	3511709200	1
B00	CONTROL-PANEL AS	KOG-62150S	3516716500	1
1	CAVITY HEMMING AS	KOG-6215	3516107510	1
2	REAR-PLATE *O	SBHG-1 T0.6	3516503701	1
3	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S422X4081	4
4	COVER WAVE GUIDE	MICA T0.5	3511404700	1
5	SCREW TAPPING	T1 BIN 4X8 MFNI	7113400814	1
6	MOTOR SYNCRO	240V 25W GM-16-24FD16	3966030500	1
7	SCREW TAPPING	T2S PAN 4X8 MFZN	7121400811	2
8	THERMOSTAT	BOC: ON 90C: OFF	3518905100	1
9	SCREW TAPPING	T2S PAN 3x8 MFZN	7121300611	1
10	SWITCH SLOW ACTING RELAY	DWSR-1	3518570400	1
11	SCREW SPECIAL	T2S TRS 4x12 MFZN	7122401211	1
12	COUPLER	TEFLON	3517401330	1
13	BASE	SBHG T0.8	3510310800	1
14	STOPPER HINGE *U AS	KOR-121M0A	3515202800	1
15	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S422X4081	1
16	FOOT	PP, DASF-130	3512100900	4
17	CAPACITOR HV	2100VAC, 0.95uF KOG-62150S	441U667020	1
18	HOLDER HV CAPACITOR	SECC T0.8	441Q827032	1
19	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S422X4081	1
20	DIODE HV	SANKEN HVR-1X-32B(D5.3)	4416V24000	1
21	H.V FUSE	5KV 0.7A HV-41A	3518700800	1
22	TRANS HV	DY-N85S0-62T	3518113500	1
	TRANS HV		3518113510	1
23	SCREW SPECIAL	TT2 HEX FG 4X10 SE MFZN	7S427W40A1	5
24	SCREW SPECIAL	T1 TRS 4X10 SE MFZN	7S312X40A1	4
25	LOCK	POM	3513807900	1
26	LAMP	BL 240V 25W T25 C7A	3513601600	1
27	SCREW SPECIAL	T2S TRS 4X12 SE MFZN	7122401211	2
28	SW MICRO	VP-531A-OF	4415A66910	1
29	SW MICRO	VP-533A-OF	4415A17352	2
30	LEVER LOCK	POM	3513701300	1
31	SCREW SPECIAL	T2S TRS 4X12 SE MFZN	7122401211	1
32	NUT HEX	6N-2-5 MFZN	7392500011	1
33	HEATER SHEATH	230V 1150W	3512803300	1
34	NUT HEX	6N-2-5 MFZN	7392500011	1
35	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S312X40A1	2
36	GUIDE AIR OUTLET	SA1D-80 T0.5	3512513110	1
37	SCREW SPECIAL	TT2 TRS 4X10 SE MFZN	7S422X40A1	1
38	MAGNETRON	2M218H(MF)I	3518002200	1
39	SCREW SPECIAL	TT2 HEX FG 4X10 SE MFZN	7S427W40A1	3
40	FORM	CR 40x20x7.5t	3517302600	1
41	FAN	PP GF20	3511800100	1
42	GUIDE WIND	PP	3512513700	1
43	MOTOR SHADED POLE	230V 25W MW15(A-KO)	3963512910	1
44	SCREW TAPPING	T1 TRS 4X25 MFZN	7112402511	2
45	SCREW SPECIAL	T2S PAN 4X12 PW SE MFZN	7S341W40B1	2
46	CORD POWER AS	3x1.5 80x80 120-RTML	35113A5QJ5	1
47	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S312X40A1	2
48	NOISE FILTER	DWLF-M02	3518603710	1
49	SCREW SPECIAL	TT2 TRS 4X8 SE MFZN	7S312X40A1	1
50	CABINET	PCM T0.5	3510802100	1
51	SCREW SPECIAL	T1 TRS 4X10 SE MFZN	7S312X40A1	3
52	ROLLER GUIDE ASSY	KOG-62150S	3512517100	1
53	TRAY	GLASS	3517203600	1
54	TRAY RACK	MSWR 3mm H:85	3517206600	1
55	HARNESS MAIN	KOG-62150S	3512714200	1
56	FORM	T5 x W20 x L150	3517302700	1

